

# TRex

---

**REVISION HISTORY**

NUMBER	DATE	DESCRIPTION	NAME
2.1	2017-02-21-a		H

---

# Contents

<b>1</b>	<b>Introduction</b>	<b>1</b>
1.1	A word on traffic generators	1
1.1.1	Current Challenges:	1
1.1.2	Implications	1
1.2	Overview of TRex	2
1.3	Purpose of this guide	2
<b>2</b>	<b>Download and installation</b>	<b>3</b>
2.1	Hardware recommendations	3
2.2	Installing OS	7
2.2.1	Supported versions	7
2.2.2	Download Linux	8
2.2.3	Install Linux	8
2.2.4	Verify Intel NIC installation	9
2.3	Obtaining the TRex package	9
<b>3</b>	<b>First time Running</b>	<b>11</b>
3.1	Configuring for loopback	11
3.1.1	Identify the ports	11
3.1.2	Creating minimum configuration file	12
3.2	Script for creating config file	12
3.2.1	Interactive mode	13
3.2.2	Command line mode	13
3.3	TRex on ESXi	14
3.3.1	Configuring ESXi for running TRex	14
3.3.2	Configuring Pass-through	14
3.4	Low-end machines	15
3.5	Linux interfaces	16
3.6	Dummy ports	17
3.7	Configuring for running with router (or other L3 device) as DUT	17
3.8	Running TRex, understanding output	17
3.8.1	TRex output	17
3.8.2	latency stats	19
3.8.3	additional information about statistics in output	19

---

---

<b>4</b>	<b>Basic usage</b>	<b>20</b>
4.1	DNS basic example	20
4.2	DNS, take flow IPG from pcap file	24
4.3	DNS, Set one server ip	26
4.4	DNS, Reduce the number of clients	27
4.5	DNS, W=1	28
4.6	Mixing HTTP and DNS templates	30
4.7	SFR traffic YAML	31
4.8	Running examples	33
4.8.1	TRex command line examples	33
4.9	Traffic profiles provided with the TRex package	34
4.10	Mimicking stateless traffic under stateful mode	35
4.11	Clients/Servers IP allocation scheme	38
4.11.1	More Details about IP allocations	40
4.11.2	How to determine the packet per second(PPS) and Bit per second (BPS)	41
4.11.3	Per template allocation + future plans	41
4.12	Measuring Jitter/Latency	43
4.12.1	Interpreting Jitter/Latency Output	43
<b>5</b>	<b>Advanced features</b>	<b>45</b>
5.1	VLAN (dot1q) support	45
5.2	Utilizing maximum port bandwidth in case of asymmetric traffic profile	45
5.3	Static source MAC address setting	47
5.4	IPv6 support	48
5.5	Client clustering configuration	49
5.5.1	Latency with Cluster mode	54
5.5.2	Clustering example	54
5.5.3	Clustering example - four ports	58
5.6	NAT support	60
5.6.1	Examples	61
5.7	Flow order/latency verification	62
<b>6</b>	<b>Reference</b>	<b>65</b>
6.1	Traffic YAML (-f argument of stateful)	65
6.1.1	Global Traffic YAML section	65
6.1.2	Timer Wheel section configuration	66
6.1.3	Per template section	66
6.2	Platform YAML (--cfg argument)	66
6.2.1	Basic Configuration	67

---

---

6.2.2	Memory section configuration . . . . .	68
6.2.3	Platform section configuration . . . . .	69
6.2.4	Timer Wheel section configuration . . . . .	72
6.2.5	Timer Wheel section configuration . . . . .	72
6.3	Command line options . . . . .	72
<b>7</b>	<b>Appendix</b>	<b>76</b>

---

# Chapter 1

## Introduction

### 1.1 A word on traffic generators

Traditionally, routers have been tested using commercial traffic generators, while performance typically has been measured using packets per second (PPS) metrics. As router functionality and services have become more complex, stateful traffic generators have become necessary to provide more realistic traffic scenarios.

Advantages of realistic traffic generators:

- Accurate performance metrics.
- Discovering bottlenecks in realistic traffic scenarios.

#### 1.1.1 Current Challenges:

- **Cost:** Commercial stateful traffic generators are very expensive.
- **Scale:** Bandwidth does not scale up well with feature complexity.
- **Standardization:** Lack of standardization of traffic patterns and methodologies.
- **Flexibility:** Commercial tools are not sufficiently agile when flexibility and customization are needed.

#### 1.1.2 Implications



- High capital expenditure (capex) spent by different teams.
  - Testing in low scale and extrapolation became a common practice. This is non-ideal and fails to indicate bottlenecks that appear in real-world scenarios.
  - Teams use different benchmark methodologies, so results are not standardized.
  - Delays in development and testing due to dependence on testing tool features.
  - Resource and effort investment in developing different ad hoc tools and test methodologies.
-

## 1.2 Overview of TRex

TRex addresses the problems associated with commercial stateful traffic generators, through an innovative and extendable software implementation, and by leveraging standard and open software and x86/UCS hardware.

- Generates and analyzes L4-7 traffic. In one package, provides capabilities of commercial L7 tools.
- Stateful traffic generator based on pre-processing and smart replay of real traffic templates.
- Generates and **amplifies** both client- and server-side traffic.
- Customized functionality can be added.
- Scales to 200Gb/sec for one UCS (using Intel 40Gb/sec NICs).
- Low cost.
- Self-contained package that can be easily installed and deployed.
- Virtual interface support enables TRex to be used in a fully virtual environment without physical NICs. Example use cases:
  - Amazon AWS
  - Cisco LaaS
  - TRex on your laptop

Table 1.1: TRex Hardware

Cisco UCS Platform	Intel NIC
	

## 1.3 Purpose of this guide

This guide explains the use of TRex internals and the use of TRex together with Cisco ASR1000 Series routers. The examples illustrate novel traffic generation techniques made possible by TRex.

## Chapter 2

# Download and installation

### 2.1 Hardware recommendations

TRex is a Linux application, interacting with Linux kernel modules. It uses DPDK (there is **no** need to install DPDK as a library). TRex should work on any COTS x86 server (it can be compiled to ARM but not tested in our regression). Our regression setups uses Cisco UCS hardware for high performance low latency use cases. The following platforms have been tested and are recommended for operating TRex.

Another option to run TRex for low performance and low footprint (~1MPPS limited by the kernel) is to use the kernel interfaces in raw socket mode (require super user). In this way TRex can run almost on any Linux platform and any Linux interfaces (e.g. veth/tap/tun/physical wireless interfaces). Docker example is provided [Docker](#) for more info see [low footprint \[low\\_end\]](#) and [Linux interfaces \[linux\\_interfaces\]](#)

---

#### Note

Not all supported DPDK interfaces are supported by TRex.

---

Table 2.1: Preferred UCS hardware

UCS Type	Comments
UCS C220 Mx	<b>Preferred Low-End.</b> Supports up to 40Gb/sec with 540-D2. With newer Intel NIC (recommended), supports 80Gb/sec with 1RU. See table below describing components.
UCS C200	Early UCS model.
UCS C210 Mx	Supports up to 40Gb/sec PCIe3.0.
UCS C240 Mx	<b>Preferred, High-End</b> Supports up to 200Gb/sec. 6x XL710 NICS (PCIex8) or 2xFM10K (PCIex16). See table below describing components.
UCS C260M2	Supports up to 30Gb/sec (limited by V2 PCIe).

Table 2.2: Low-end UCS C220 Mx - Internal components

Components	Details
CPU	2x E5-2620 @ 2.0 GHz.
CPU Configuration	2-Socket CPU configurations (also works with 1 CPU).
Memory	2x4 banks f.or each CPU. Total of 32GB in 8 banks.

---



Table 2.2: (continued)

Components	Details
RAID	No RAID.

Table 2.3: High-end C240 Mx - Internal components

Components	Details
CPU	2x E5-2667 @ 3.20 GHz.
PCIe	1x Riser PCI expansion card option A PID UCSC-PCI-1A-240M4 enables 2 PCIe x16.
CPU Configuration	2-Socket CPU configurations (also works with 1 CPU).
Memory	2x4 banks for each CPU. Total of 32GB in 8 banks.
RAID	No RAID.
Riser 1/2	Both left and right should support x16 PCIe. Right (Riser1) should be from option A x16 and Left (Riser2) should be x16. Need to order both.

**Important**

In all bare metal cases, it's important to have 4 DRAM channels. Fewer channels will impose a performance issue. To test it you can run `sudo dmidecode -t memory | grep CHANNEL` and check CHANNEL x

Table 2.4: Supported NICs

Chipset	Bandwidth (Gb/sec)	TSO	LRO	Example
Any Kernel Linux interface	x	x	x	veth,tap,tun,eth0,wireless interface, up to ~1MPPS, one thread. see <a href="#">low footprint [low_end]</a> and <a href="#">Linux interfaces [linux_interfaces]</a>
Intel I350	1	+	-	Intel 4x1GE 350-T4 NIC
Intel 82599	0.1/1/2.5/5/10	+	+	Cisco part ID:N2XX-AIPCI01 Intel x520-D2, Intel X520 Dual Port 10Gb SFP+ Adapter. X550-T2,x540-T2 for tbase Cisco part ID:UCSC-PCIE-ID10GC
Intel 82599 VF	x	+	+	
Intel X710	10	+	-	Cisco part ID:UCSC-PCIE-IQ10GF <b>SFP+</b> , <b>Preferred</b> support per stream stats in hardware <a href="#">Silicom PE310G4i71L</a>
Intel XL710	40	+	-	Cisco part ID:UCSC-PCIE-ID40GF, <b>QSFP+</b> (copper/optical) <b>Preferred</b> support per stream stats in hardware
Intel XXV710	1/10/25	+	-	SFP28 <a href="#">Intel XXV710</a> <b>Preferred</b> support per stream stats in hardware

Table 2.4: (continued)

Chipset	Bandwidth (Gb/sec)	TSO	LRO	Example
Intel XL710/X710 VF	x	+	-	
Napatech SmartNICs NT40E3-4	10	-	-	./b configure --with-ntacc to build the library
Napatech SmartNICs NT80E3-2	40	-	-	./b configure --with-ntacc to build the library
Napatech SmartNICs NT100E3-1	100	-	-	./b configure --with-ntacc to build the library. The only Napatech NIC in our regression. <a href="#">more info [napatech_support]</a>
Napatech SmartNICs NT200A01	100	-	-	./b configure --with-ntacc to build the library <b>Note:</b> This NIC require a BIOS with PCIe bifurcation support. <a href="#">PCIe bifurcation</a>
Mellanox ConnectX-4/Lx	25/40/50/56/100	+	+	SFP28/QSFP28, <a href="#">ConnectX-4 ConnectX-4-brief</a> (copper/optical) supported from v2.11 more details and issues <a href="#">TRex Support [connectx_support]</a>
Mellanox ConnectX-5	25/40/50/56/100	+	+	Supported, see issues <a href="#">TRex Support [connectx_support]</a>
Cisco 1300 series	40	+	-	QSFP+, VIC 1380, VIC 1385, VIC 1387 see more <a href="#">TRex Support [ciscovic_support]</a>
VMXNET3	VMware paravirtualized	+	-	Connect using VMware vSwitch
E1000	paravirtualized	+	-	VMware/KVM/VirtualBox
Virtio	paravirtualized	+	-	KVM

Table 2.5: SFP+ support

SFP+	Intel Ethernet Converged X710-DAX	Silicom PE310G4i71L (Open optic)	82599EB 10-Gigabit
<a href="#">Cisco SFP-10G-SR</a>	Not supported	<b>Supported</b>	<b>Supported</b>
<a href="#">Cisco SFP-10G-LR</a>	Not supported	<b>Supported</b>	<b>Supported</b>
<a href="#">Cisco SFP-H10GB-CU1M</a>	<b>Supported</b>	<b>Supported</b>	<b>Supported</b>
<a href="#">Cisco SFP-10G-AOC1M</a>	<b>Supported</b>	<b>Supported</b>	<b>Supported</b>

**Note**

Intel X710 NIC (example: FH X710DA4FHBLK) operates *only* with Intel SFP+. For open optic, use the Silicom PE310G4i71L NIC, available here: [http://www.silicom-usa.com/PE310G4i71L\\_Quad\\_Port\\_Fiber\\_SFP+\\_10\\_Gigabit\\_Ethernet\\_PCI\\_Express\\_Server\\_Adapter\\_49](http://www.silicom-usa.com/PE310G4i71L_Quad_Port_Fiber_SFP+_10_Gigabit_Ethernet_PCI_Express_Server_Adapter_49)

Table 2.6: XL710 NIC base QSFP+ support

<b>QSFP+</b>	<b>Intel Ethernet Converged XL710-QDAX</b>	<b>Silicom PE340G2Q71 Open optic</b>
QSFP+ SR4 optics	<b>Supported:</b> APPROVED OPTICS. <b>Not supported:</b> Cisco QSFP-40G-SR4-S	<b>Supported:</b> Cisco QSFP-40G-SR4-S
QSFP+ LR-4 Optics	<b>Supported:</b> APPROVED OPTICS. <b>Not supported:</b> Cisco QSFP-40G-LR4-S	<b>Supported:</b> Cisco QSFP-40G-LR4-S
QSFP Active Optical Cables (AoC)	<b>Supported:</b> Cisco QSFP-H40G-AOC	<b>Supported:</b> Cisco QSFP-H40G-AOC
QSFP+ Intel Ethernet Modular Supported	N/A	N/A
QSFP+ DA twin-ax cables	N/A	N/A
Active QSFP+ Copper Cables	<b>Supported:</b> Cisco QSFP-4SFP10G-CU	<b>Supported:</b> Cisco QSFP-4SFP10G-CU

**Note**

For Intel XL710 NICs, Cisco SR4/LR QSFP+ does not operate. Use Silicom with Open ↔ Optic.

Table 2.7: ConnectX-4 NIC base QSFP28 support (100gb)

<b>QSFP28</b>	<b>ConnectX-4</b>
QSFP28 SR4 optics	N/A
QSFP28 LR-4 Optics	N/A
QSFP28 (AoC)	<b>Supported:</b> Cisco QSFP-100G-AOCxM
QSFP28 DA twin-ax cables	<b>Supported:</b> Cisco QSFP-100G-CUxM

Table 2.8: Cisco VIC NIC base QSFP+ support

<b>QSFP+</b>	<b>Intel Ethernet Converged XL710-QDAX</b>
QSFP+ SR4 optics	N/A
QSFP+ LR-4 Optics	N/A
QSFP Active Optical Cables (AoC)	<b>Supported:</b> Cisco QSFP-H40G-AOC
QSFP+ Intel Ethernet Modular Optics	N/A
QSFP+ DA twin-ax cables	N/A
Active QSFP+ Copper Cables	N/A

Table 2.9: FM10K QSFP28 support

QSFP28	Example
todo	todo

---

### Important

- Intel SFP+ 10Gb/sec is the only one supported by default on the standard Linux driver. TRex also supports Cisco 10Gb/sec SFP+.



- For operating high speed throughput (example: several Intel XL710 40Gb/sec), use different **NUMA** nodes for different NICs.  
To verify NUMA and NIC topology: `lstopo (yum install hwloc)`  
To display CPU info, including NUMA node: `lscpu`  
NUMA usage: [example \[numa-example\]](#)
- For the Intel XL710 NIC, verify that the NVM is v5.04. [Info \[xl710-firmware\]](#).

```
- > sudo ./t-rex-64 -f cap2/dns.yaml -d 0 *-v 6* --nc | grep NVM
PMD:FW 5.0 API 1.5 NVM 05.00.04 eetrack 800013fc
```

---

Table 2.10: Sample order for recommended low-end Cisco UCSC-C220-M3S with 4x10Gb ports

Component	Quantity
UCSC-C220-M3S	1
UCS-CPU-E5-2650	2
UCS-MR-1X041RY-A	8
A03-D500GC3	1
N2XX-AIPCI01	2
UCSC-PSU-650W	1
SFS-250V-10A-IS	1
UCSC-CMA1	1
UCSC-HS-C220M3	2
N20-BBLKD	7
UCSC-PSU-BLKP	1
UCSC-RAIL1	1

---

### Note

Purchase the 10Gb/sec SFP+ separately. Cisco would be fine with TRex (but not for plain Linux driver).

---

## 2.2 Installing OS

### 2.2.1 Supported versions

Supported Linux versions:

- Fedora 20-23, 64-bit kernel (not 32-bit)
-

- Ubuntu 14.04.1 LTS, 64-bit kernel (not 32-bit)
- Ubuntu 16.xx LTS, 64-bit kernel (not 32-bit) — Not fully supported.
- CentOS/RHEL 7.4, 64-bit kernel (not 32-bit) — This is the only working option for ConnectX-4.

---

**Note**

Additional OS versions may be supported by compiling the necessary drivers.

---

To check whether a kernel is 64-bit, verify that the output of the following command is `x86_64`.

```
[bash]>uname -m
x86_64
```

## 2.2.2 Download Linux

ISO images for supported Linux releases can be downloaded from:

Table 2.11: Supported Linux ISO image links

Distribution	SHA256 Checksum
CentOS 7.4 (recommended)	CentOS 7.4 checksums
Fedora 20	Fedora 20 CHECKSUM
Fedora 21	Fedora 21 CHECKSUM
Ubuntu 14.04.1	Ubuntu 14.04* CHECKSUMs
Ubuntu 16.04.1	Ubuntu 16.04* CHECKSUMs

For Fedora downloads...

- Select a mirror close to your location:  
<https://admin.fedoraproject.org/mirrormanagement/mirrors/Fedora>  
 Choose: "Fedora Linux http" → releases → <version number> → Server → x86\_64 → iso → Fedora-Server-DVD-x86\_64-<version number>.iso
- Verify that the **SHA-256** checksum value of the downloaded file matches the linked checksum values with the `sha256sum` command. Example:

```
[bash]>sha256sum Fedora-18-x86_64-DVD.iso
91c5f0aca391acf76a047e284144f90d66d3d5f5dcd26b01f368a43236832c03
```

## 2.2.3 Install Linux

Ask your lab admin to install the Linux using CIMC, assign an IP, and set the DNS. Request the sudo or super user password to enable you to ping and SSH.

[Example of installing Fedora 21 Server \[fedora21\\_example\]](#)

---

**Note**

- Requirement for using TRex: `sudo` or root password for the machine.
- Upgrading the linux Kernel using `yum upgrade` requires building the TRex drivers.
- In Ubuntu 16, auto-updater is enabled by default. It is recommended to turn it off. Updating kernel requires re-compiling the DPDK .ko file.  
To disable auto-updater:  
> `sudo apt-get remove unattended-upgrades`

**2.2.4 Verify Intel NIC installation**

Use `lspci` to verify the NIC installation.

Example: 4x 10Gb/sec TRex configuration (see output below):

- I350 management port
- 4x Intel Ethernet Converged Network Adapter model x520-D2 (82599 chipset)

```
[bash]>lspci | grep Ethernet
01:00.0 Ethernet controller: Intel Corporation I350 Gigabit Network Connection (rev 01) ←
# ❶
01:00.1 Ethernet controller: Intel Corporation I350 Gigabit Network Connection (rev 01) ←
# ❷
03:00.0 Ethernet controller: Intel Corporation 82599EB 10-Gigabit SFI/SFP+ Network ←
Connection (rev 01) # ❸
03:00.1 Ethernet controller: Intel Corporation 82599EB 10-Gigabit SFI/SFP+ Network ←
Connection (rev 01)
82:00.0 Ethernet controller: Intel Corporation 82599EB 10-Gigabit SFI/SFP+ Network ←
Connection (rev 01)
82:00.1 Ethernet controller: Intel Corporation 82599EB 10-Gigabit SFI/SFP+ Network ←
Connection (rev 01)
```

- ❶ Management port
- ❷ CIMC port
- ❸ 10Gb/sec traffic ports (Intel 82599EB)

**2.3 Obtaining the TRex package**

Use `ssh` to connect to the TRex machine and execute the commands described below.

**Note**

Prerequisite: `$TREX_WEB_URL` is <http://trex-tgn.cisco.com/trex> or [csi-wiki-01:8181/trex](http://csi-wiki-01:8181/trex) (Cisco internal)

**Tip**

For easier copy/paste, begin by assigning a temporary local variable to denote the appropriate TRex `TREX_WEB_URL`:

```
[bash]>TREX_WEB_URL=http://<AS PER ABOVE PRE-REQUISITE NOTE>
```

**Latest (stable) release:**

```
[bash]>mkdir -p /opt/trex  
[bash]>cd /opt/trex  
[bash]>wget --no-cache ${TREX_WEB_URL}/release/latest  
[bash]>tar -xzvf latest
```

**Latest (bleeding edge) version:**

```
[bash]>wget --no-cache ${TREX_WEB_URL}/release/be_latest
```

**To obtain a specific version:**

```
[bash]>wget --no-cache ${TREX_WEB_URL}/release/vX.XX.tar.gz #❶
```

- ❶ where X.XX = major.minor version number as per [https://trex-tgn.cisco.com/trex/doc/release\\_notes.html](https://trex-tgn.cisco.com/trex/doc/release_notes.html)

## Chapter 3

# First time Running


### 3.1 Configuring for loopback

Before connecting TRex to your DUT, it is strongly advised to verify that TRex and the NICs work correctly in loopback.

---

#### Note

1. For best performance, loopback the interfaces on the same NUMA (controlled by the same physical processor). If you are unable to check this, proceed without this step.
  2. If you are using a 10Gbs NIC based on an Intel 520-D2 NIC, and you loopback ports on the same NIC using SFP+, the device might not sync, causing a failure to link up. Many types of SFP+ (Intel/Cisco/SR/LR) have been verified to work. If you encounter link issues, try to loopback interfaces from different NICs, or use [Cisco twinax copper cable](#).
- 

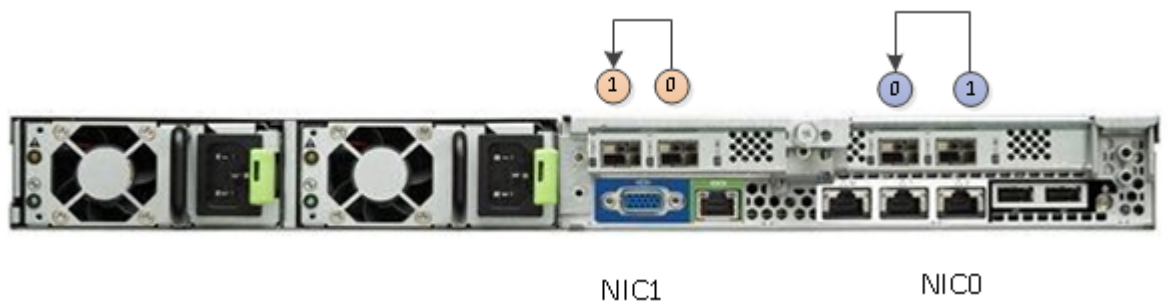

#### Loopback example

##### 3.1.1 Identify the ports

Use the following command to identify ports.

```
[bash]>sudo ./dpmk_setup_ports.py -s

Network devices using DPDK-compatible driver
=====

Network devices using kernel driver
=====
0000:03:00.0 '82599ES 10-Gigabit SFI/SFP+ Network Connection' drv= unused=ixgb #1
```



```

0000:03:00.1 '82599ES 10-Gigabit SFI/SFP+ Network Connection' drv= unused=ixgb
0000:13:00.0 '82599ES 10-Gigabit SFI/SFP+ Network Connection' drv= unused=ixgb
0000:13:00.1 '82599ES 10-Gigabit SFI/SFP+ Network Connection' drv= unused=ixgb
0000:02:00.0 '82545EM Gigabit Ethernet Controller (Copper)' if=eth2 drv=e1000 unused= ↵
    igb_uio *Active* #②

Other network devices
=====
<none>

```

- ① If you have not run any DPDK applications, the command output shows a list of interfaces bound to the kernel or not bound at all.
- ② The interface marked *active* is the one used by your ssh connection. **Never** put this interface into TRex config file.

Choose the ports to use and follow the instructions in the next section to create a configuration file.

### 3.1.2 Creating minimum configuration file

Default configuration file name: `/etc/trex_cfg.yaml`.

For a full list of YAML configuration file options, see [Platform YAML \[trex\\_config\\_yaml\\_config\\_file\]](#).

For many purposes, it is convenient to begin with a copy of the basic configuration file template, available in the `cfg` folder:

```
[bash]>cp  cfg/simple_cfg.yaml /etc/trex_cfg.yaml
```

Next, edit the configuration file, adding the interface and IP address details.

Example:

```

<none>
- port_limit      : 2
  version        : 2
#List of interfaces. Change according to your setup. Use ./dpdk_setup_ports.py -s to see ↵
available options.
interfaces       : ["03:00.0", "03:00.1"] #①
port_info        : # Port IPs. Change according to your needs. In case of loopback, you can ↵
  leave as is.
  - ip            : 1.1.1.1
    default_gw    : 2.2.2.2
  - ip            : 2.2.2.2
    default_gw    : 1.1.1.1

```

- ① Edit this line to match the interfaces you are using. All NICs must have the same type - do not mix different NIC types in one config file. For more info, see [trex-201](#).

## 3.2 Script for creating config file

A script is available to automate the process of tailoring the basic configuration file to your needs. The script gets you started, and then you can then edit the resulting configuration file directly for advanced options. For details, see [Platform YAML \[trex\\_config\\_yaml\\_config\\_file\]](#).

There are two ways to run the script:

- Interactive mode: Script prompts you for parameters.
- Command line mode: Provide all parameters using command line options.

### 3.2.1 Interactive mode

The script provides a list of available interfaces with interface-related information. Follow the instructions to create a basic config file.

```
[bash]>sudo ./dpsdk_setup_ports.py -i
```

### 3.2.2 Command line mode

Run the following command to display a list of all interfaces and interface-related information:

```
[bash]>sudo ./dpsdk_setup_ports.py -t
```

- In case of **Loopback** and/or only **L1-L2 Switches** on the way, IPs and destination MACs are not required. The script assumes the following interface connections: 0↔1, 2↔3 etc.

Run the following:

```
[bash]>sudo ./dpsdk_setup_ports.py -c <TRex interface 0> <TRex interface 1> ...
```

- In case of a **Router** (or other next hop device, such as **L3 Switch**), specify the TRex IPs and default gateways, or MACs of the router, as described below.

Table 3.1: Command line options for the configuration file creation script (dpsdk\_setup\_ports.py -c)

Argument	Description	Example
-c	Create a configuration file by specified interfaces (PCI address or Linux names: eth1 etc.)	-c 03:00.1 eth1 eth4 84:00.0
--dump	Dump created configuration to screen.	
-o	Output the configuration to a file.	-o /etc/trex_cfg.yaml
--dest-macs	Destination MACs to be used per each interface. Use this option for MAC-based configuration instead of IP-based. Do not use this option together with --ip and --def_gw	--dest-macs 11:11:11:11:11:11 22:22:22:22:22:22
--ip	List of IPs to use for each interface. If --ip and --dest-macs are not specified, the script assumes loopback connections (0↔1, 2↔3 etc.).	--ip 1.2.3.4 5.6.7.8
--def-gw	List of default gateways to use for each interface. When using the --ip option, also use the --def_gw option.	--def-gw 3.4.5.6 7.8.9.10
--ci	Cores include: White list of cores to use. Include enough cores for each NUMA.	--ci 0 2 4 5 6
--ce	Cores exclude: Black list of cores to exclude. When excluding cores, ensure that enough remain for each NUMA.	--ce 10 11 12
--no-ht	No HyperThreading: Use only one thread of each core specified in the configuration file.	
--prefix	(Advanced option) Prefix to be used in TRex configuration in case of parallel instances.	--prefix first_instance
--zmq-pub-port	(Advanced option) ZMQ Publisher port to be used in TRex configuration in case of parallel instances.	--zmq-pub-port 4000
--zmq-rpc-port	(Advanced option) ZMQ RPC port to be used in the TRex configuration in case of parallel instances.	--zmq-rpc-port
--ignore-numa	(Advanced option) Ignore NUMAs for configuration creation. This option may reduce performance. Use only if necessary - for example, in case of a pair of interfaces at different NUMAs.	

### 3.3 TRex on ESXi

General recommendation: For best performance, run TRex on "bare metal" hardware, without any type of VM. Bandwidth on a VM may be limited, and IPv6 may not be fully supported.


In special cases, it may be reasonable or advantageous to run TRex on VM:

- If you already have VM installed, and do not require high performance.
- Virtual NICs can be used to bridge between TRex and NICs not supported by TRex.


#### 3.3.1 Configuring ESXi for running TRex

1. Click the host machine, then select Configuration → Networking.

- a. One of the NICs must be connected to the main vSwitch network for an "outside" connection for the TRex client and ssh:

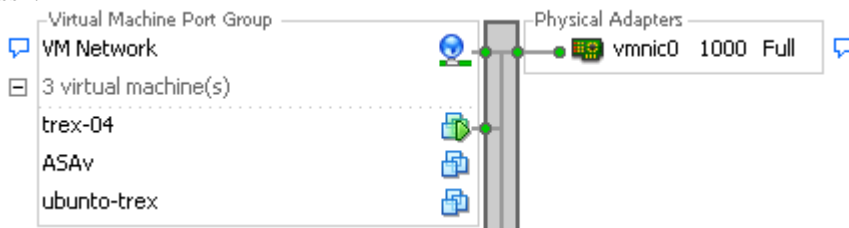

- b. Other NICs that are used for TRex traffic must be in a separate vSwitch:

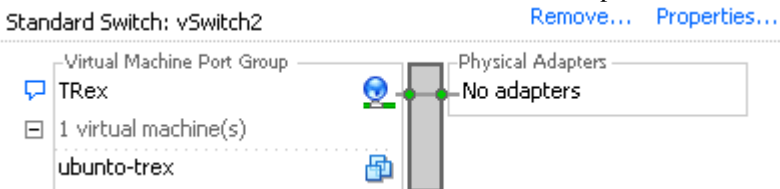

2. Right-click the guest machine → Edit settings → Ensure the NICs are set to their networks:

Client Device	Network
Network adapter 1	VM Network
Network adapter 2	TRex
Network adapter 3	TRex

#### Note

Before version 2.10, the following command did not function correctly:

```
sudo ./t-rex-64 -f cap2/dns.yaml --lm 1 --lo -l 1000 -d 100
```


The vSwitch did not route packets correctly. This issue was resolved in version 2.10 when TRex started to support ARP.

#### 3.3.2 Configuring Pass-through


Pass-through enables direct use of host machine NICs from within the VM. Pass-through access is generally limited only by the NIC/hardware itself, but there may be occasional spikes in latency (~10ms). Passthrough settings cannot be saved to OVA.

1. Click the host machine. Enter Configuration → Advanced settings → Edit.

2. Mark the desired NICs.

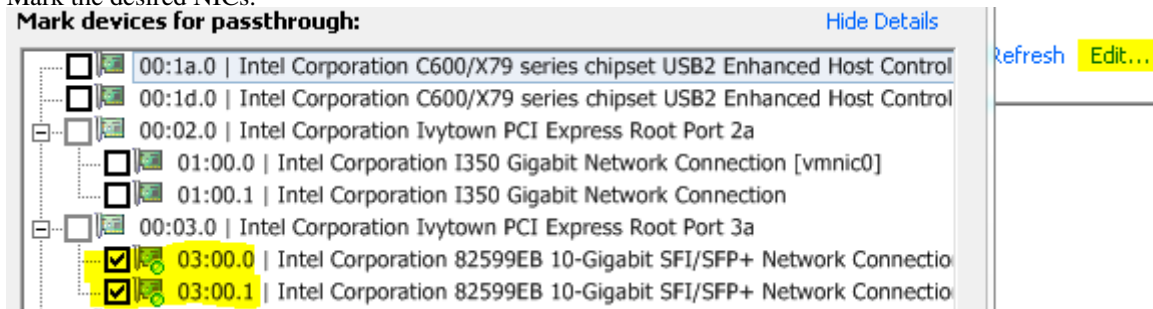

3. Reboot the ESXi to apply.
4. Right-click the guest machine. Edit settings → Add → **PCI device** → Select the NICs individually.

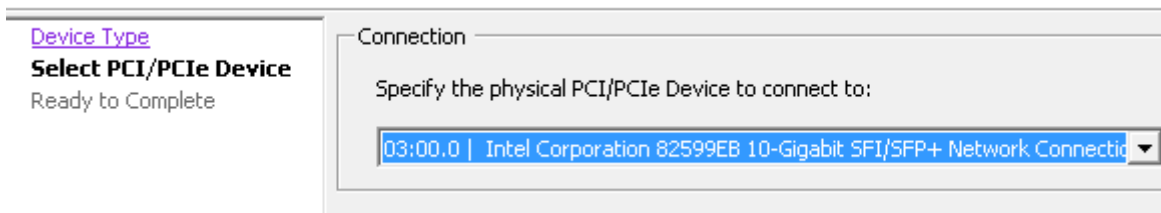

### 3.4 Low-end machines

Starting from version 2.37, was added feature to run TRex on low-end machines like weak laptops.

To enable this mode, define `low_end` argument in platform config file:

```
- port_limit: 2
  version: 2
  interfaces: ['82:00.0', '82:00.1']
  low_end: true
...
```

This mode implies following:

- All TRex threads will be assigned to core 0
- Lower memory allocation/requirement.  
If you have already started without `low_end` argument, reboot the Linux to free hugepages.
- Sleeps in scheduler instead of busy wait (less accurate, but saves power)
- Do not retry sending packets in case of queue full.
- "platform" section in config file is ignored.

We have tested with following VM:

- 1 core
- 475MB of RAM
- Two virtual NICs E1000

For example, stateless IMIX:

```
>start -f stl/imix.py -m 100kpps
```

Tx bps L2		289.67 Mbps		289.67 Mbps		579.34 Mbps
Tx bps L1		305.68 Mbps		305.68 Mbps		611.36 Mbps
Tx pps		100.07 Kpps		100.07 Kpps		200.14 Kpps
Line Util.		30.57 %		30.57 %		

"top" output:

```
%CPU COMMAND
 1.0 _t-rex-64
 0.0  \- eal-intr-thread
13.0  \- Trex DP core 1
 3.0  \- TRex RX
 0.0  \- Trex Publisher
 0.0  \- Trex Publisher
 0.0  \- Trex ZMQ sync
 0.0  \- Trex Watchdog
 0.0  \- Trex ZMQ sync
 0.0  \- Trex ZMQ sync
```

### 3.5 Linux interfaces

Another interesting low-end use case is using native Linux interfaces.  
(Starting from version 2.37)

Pros:

- Any NIC type (supported by Linux) can be used, particularly, virtual interfaces without PCI address.
- Does not require hugepages.
- Can capture the traffic in Linux (Wireshark / tcpdump etc.).
- Startup is very fast (NICs are not initialized)
- Does not require special Kernel module (igb\_uio.ko etc.)

Cons:

- Single TX/RX core, particularly the rate will be limited to ~1Mpps.
- Demands more CPU utilization.
- Slows down the Linux overall.

Platform config file example:

```
- port_limit: 2
  version: 2
  interfaces: ['eth2', 'eth3']
...
```

Under the hood it's being replaced with following (this full syntax can also be used, possibly containing another DPDK arguments):

```
- port_limit: 2
  version: 2
  interfaces: ['--vdev=net_af_packet0,iface=eth2', '--vdev=net_af_packet1,iface=eth3']
...
```

## 3.6 Dummy ports

(Starting from version 2.38)

Dummy ports can solve 2 issues:

- Odd number of interfaces. For example, TRex with one interface only.
- Performance degradation when adjacent interfaces belong to different NUMAs.

Configuration example:

```
...
interfaces: ['07:00.0', 'dummy', 'dummy', '8a:00.0']
...
```

Incorrect configuration example:

```
...
interfaces: ['dummy', 'dummy', 'dummy', '8a:00.0']
....
```

(Each pair of ports should have at least one non-dummy port)

---

### Note

1. Old GUI does not work with dummy ports. Use latest.
  2. Client (Python API, trex-console) older than v2.38 will not work with dummy ports. Update your client to v2.38 or later.
- 

## 3.7 Configuring for running with router (or other L3 device) as DUT

You can follow [this presentation](#) for an example of how to configure the router as a DUT.

## 3.8 Running TRex, understanding output

After configuration is complete, use the following command to start basic TRex run for 10 seconds (it will use the default config file name `/etc/trex_cfg.yaml`):

```
[bash]>sudo ./t-rex-64 -f cap2/dns.yaml -c 4 -m 1 -d 10
```

### 3.8.1 TRex output

After running TRex successfully, the output will be similar to the following:

```
$ sudo ./t-rex-64 -f cap2/dns.yaml -d 10
Starting TRex 2.09 please wait ...
zmq publisher at: tcp://*:4500
number of ports found : 4
port : 0
-----
link          : link : Link Up - speed 10000 Mbps - full-duplex
promiscuous   : 0
```

```

port : 1
-----
link      : link : Link Up - speed 10000 Mbps - full-duplex
promiscuous : 0
port : 2
-----
link      : link : Link Up - speed 10000 Mbps - full-duplex
promiscuous : 0
port : 3
-----
link      : link : Link Up - speed 10000 Mbps - full-duplex
promiscuous : 0

-Per port stats table
  ports |          0 |          1 |          2 |          3
-----|-----|-----|-----|-----
opackets |         1003 |         1003 |         1002 |         1002
obytes   |        66213 |        66229 |        66132 |        66132
ipackets |         1003 |         1003 |         1002 |         1002
ibytes   |        66225 |        66209 |        66132 |        66132
ierrors  |             0 |             0 |             0 |             0
oerrors  |             0 |             0 |             0 |             0
Tx Bw    |       217.09 Kbps |       217.14 Kbps |       216.83 Kbps |       216.83 Kbps

-Global stats enabled
Cpu Utilization : 0.0 % ❷ 29.7 Gb/core ❸
Platform_factor : 1.0
Total-Tx       :      867.89 Kbps
Total-Rx       :      867.86 Kbps
Total-PPS      :         1.64 Kpps
Total-CPS      :         0.50 cps

Expected-PPS   :         2.00 pps ❹
Expected-CPS   :         1.00 cps ❺
Expected-BPS   :         1.36 Kbps ❻

Active-flows   :          0 ❹ Clients :      510 Socket-util : 0.0000 %
Open-flows    :          1 ❷ Servers :      254 Socket      :          1 Socket/Clients : ↔
0.0
drop-rate     :         0.00 bps ❸
current time  :      5.3 sec
test duration  :     94.7 sec

```

- ❶ Link must be up for TRex to work.
- ❷ Average CPU utilization of transmitters threads. For best results it should be lower than 80%.
- ❸ Gb/sec generated per core of DP. Higher is better.
- ❹ Total Tx must be the same as Rx at the end of the run.
- ❺ Total Rx must be the same as Tx at the end of the run.
- ❻ Expected number of packets per second (calculated without latency packets).
- ❼ Expected number of connections per second (calculated without latency packets).
- ❽ Expected number of bits per second (calculated without latency packets).
- ❹ Number of TRex active "flows". Could be different than the number of router flows, due to aging issues. Usually the TRex number of active flows is much lower than that of the router because the router ages flows slower.

- ⑩ Total number of TRex flows opened since startup (including active ones, and ones already closed).
- ⑪ Drop rate.

### 3.8.2 latency stats

Though not present in the above output, measuring latency and jitter is possible! See the [Measuring Jittery/Latency \[jitter\\_latency\]](#) section for more details.

### 3.8.3 additional information about statistics in output

#### socket

Same as the active flows.

#### Socket/Clients

Average of active flows per client, calculated as `active_flows/#clients`.

#### Socket-util

Estimate of number of L4 ports (sockets) used per client IP. This is approximately  $(100 * \text{active\_flows} / \# \text{clients}) / 64K$ , calculated as  $(\text{average active flows per client} * 100 / 64K)$ . Utilization of more than 50% means that TRex is generating too many flows per single client, and that more clients must be added in the generator configuration.

#### Platform\_factor

In some cases, users duplicate traffic using a splitter/switch. In this scenario, it is useful for all numbers displayed by TRex to be multiplied by this factor, so that TRex counters will match the DUT counters.



#### Warning

If you do not see Rx packets, review the MAC address configuration.

---




# Chapter 4

## Basic usage

### 4.1 DNS basic example

The following is a simple example helpful for understanding how TRex works. The example uses the TRex simulator. This simulator can be run on any Cisco Linux including on the TRex itself. TRex simulates clients and servers and generates traffic based on the pcap files provided.

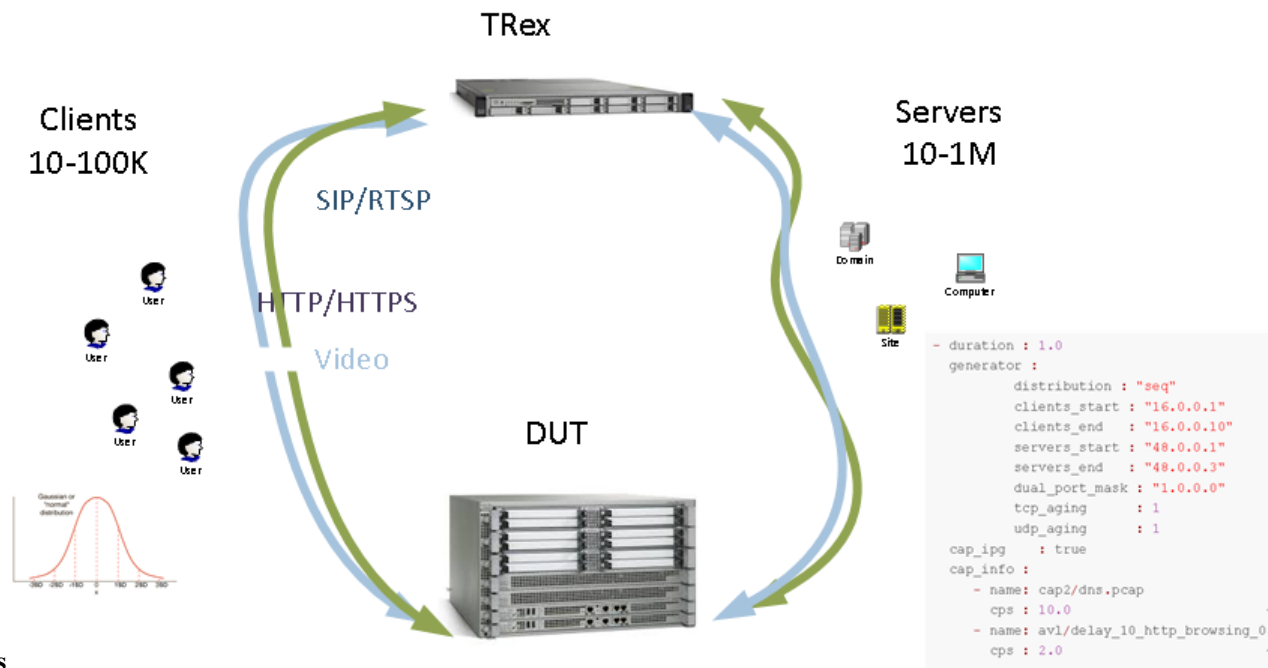

#### Clients/Servers

The following is an example YAML-format traffic configuration file (cap2/dns\_test.yaml), with explanatory notes.

```

[bash]>cat cap2/dns_test.yaml
- duration : 10.0
  generator :
    distribution : "seq"
    clients_start : "16.0.0.1"           ❶
    clients_end : "16.0.0.255"
    servers_start : "48.0.0.1"         ❷
    servers_end : "48.0.0.255"
    clients_per_gb : 201
    min_clients : 101
    dual_port_mask : "1.0.0.0"
    tcp_aging : 1
  
```

```

udp_aging      : 1
cap_info :
- name: cap2/dns.pcap
  cps : 1.0
  ipg : 10000
  rtt : 10000
  w   : 1

```

- ❶ Range of clients (IPv4 format).
- ❷ Range of servers (IPv4 format).
- ❸ pcap file, which includes the DNS cap file that will be used as a template.
- ❹ Number of connections per second to generate. In the example, 1.0 means 1 connection per second.
- ❺ Inter-packet gap (microseconds). 10,000 = 10 msec.
- ❻ Should be the same as ipg.

No.	Time	Source	Destination	Protocol	Length	Info
1	0.000000	21.0.0.2	22.0.0.12	DNS	77	Standard query 0x0030 A www.cisco.com
2	0.020944	22.0.0.12	21.0.0.2	DNS	93	Standard query response 0x0030 A 100.100.100.100

## DNS template file

The DNS template file includes:

1. **One** flow
2. Two packets
3. First packet: from the initiator (client → server)
4. Second packet: response (server → client)

TRex replaces the `client_ip`, `client_port`, and `server_ip`. The `server_port` will remain the same.

```

[bash]> ./bp-sim-32-debug -f cap2/dns.yaml -o my.erf -v 3
-- loading cap file cap2/dns.pcap
id,name          , tps, cps, f-pkts, f-bytes, duration,  Mb/sec,  MB/sec,  #❶
00, cap2/dns.pcap, 1.00,1.00, 2 ,    170 ,  0.02 ,  0.00 ,  0.00 ,
00, sum          , 1.00,1.00, 2 ,    170 ,  0.00 ,  0.00 ,  0.00 ,

Generating erf file ...
pkt_id,time,fid,pkt_info,pkt,len,type,is_init,is_last,type,thread_id,src_ip,dest_ip, ←
src_port #❷
1 , 0.010000,1,0x9055598,1,77,0,1,0,0,0,10000001,30000001,1024
2 , 0.020000,1,0x9054760,2,93,0,0,1,0,0,10000001,30000001,1024
3 , 2.010000,2,0x9055598,1,77,0,1,0,0,0,10000002,30000002,1024
4 , 2.020000,2,0x9054760,2,93,0,0,1,0,0,10000002,30000002,1024
5 , 3.010000,3,0x9055598,1,77,0,1,0,0,0,10000003,30000003,1024
6 , 3.020000,3,0x9054760,2,93,0,0,1,0,0,10000003,30000003,1024
7 , 4.010000,4,0x9055598,1,77,0,1,0,0,0,10000004,30000004,1024
8 , 4.020000,4,0x9054760,2,93,0,0,1,0,0,10000004,30000004,1024
9 , 5.010000,5,0x9055598,1,77,0,1,0,0,0,10000005,30000005,1024
10 , 5.020000,5,0x9054760,2,93,0,0,1,0,0,10000005,30000005,1024
11 , 6.010000,6,0x9055598,1,77,0,1,0,0,0,10000006,30000006,1024
12 , 6.020000,6,0x9054760,2,93,0,0,1,0,0,10000006,30000006,1024
13 , 7.010000,7,0x9055598,1,77,0,1,0,0,0,10000007,30000007,1024
14 , 7.020000,7,0x9054760,2,93,0,0,1,0,0,10000007,30000007,1024
15 , 8.010000,8,0x9055598,1,77,0,1,0,0,0,10000008,30000008,1024

```

```

16 ,8.020000,8,0x9054760,2,93,0,0,1,0,0,10000008,30000008,1024
17 ,9.010000,9,0x9055598,1,77,0,1,0,0,0,10000009,30000009,1024
18 ,9.020000,9,0x9054760,2,93,0,0,1,0,0,10000009,30000009,1024
19 ,10.010000,a,0x9055598,1,77,0,1,0,0,0,1000000a,3000000a,1024
20 ,10.020000,a,0x9054760,2,93,0,0,1,0,0,1000000a,3000000a,1024

file stats
=====
m_total_bytes           :          1.66 Kbytes
m_total_pkt             :          20.00 pkt
m_total_open_flows     :          10.00 flows
m_total_pkt             :          20
m_total_open_flows     :          10
m_total_close_flows    :          10
m_total_bytes          :          1700

```

- ❶ Global statistics on the templates given. cps=connection per second. tps is template per second. they might be different in case of plugins where one template includes more than one flow. For example RTP flow in SFR profile (avl/delay\_10\_rtp\_160k\_full.pcap)
- ❷ Generator output.

```
[bash]>wireshark my.erf
```

gives

**TRex generated output file** images/dns\_trex\_run.png

As the output file shows...

- TRex generates a new flow every 1 sec.
- Client IP values are taken from client IP pool .
- Servers IP values are taken from server IP pool .
- IPG (inter packet gap) values are taken from the configuration file (10 msec).

#### Note

In basic usage, TRex does not wait for an initiator packet to be received. The response packet will be triggered based only on timeout (IPG in this example). In advanced scenarios (for example, NAT), The first packet of the flow can process by TRex software and initiate the response packet only when a packet is received. Consequently, it is necessary to **process** the template pcap file offline and ensure that there is enough round-trip delay (RTT) between client and server packets. One approach is to record the flow with a Pagent that creates RTT (10 msec RTT in the example), recording the traffic at some distance from both the client and server (not close to either side). This ensures sufficient delay that packets from each side will arrive without delay in the DUT. TRex-dev will work on an offline tool that will make it even simpler. Another approach is to change the `yaml ipg` field to a high enough value (bigger than 10msec ).

Converting the simulator text results in a table similar to the following:

Table 4.1: DNS example formatted results

pkt	time sec	fid	flow-pkt-id	client_ip	client_port	server_ip	direction
1	0.010000	1	1	16.0.0.1	1024	48.0.0.1	→
2	0.020000	1	2	16.0.0.1	1024	48.0.0.1	←
3	2.010000	2	1	16.0.0.2	1024	48.0.0.2	→

Table 4.1: (continued)

pkt	time sec	fid	flow-pkt-id	client_ip	client_port	server_ip	direction
4	2.020000	2	2	16.0.0.2	1024	48.0.0.2	←
5	3.010000	3	1	16.0.0.3	1024	48.0.0.3	→
6	3.020000	3	2	16.0.0.3	1024	48.0.0.3	←
7	4.010000	4	1	16.0.0.4	1024	48.0.0.4	→
8	4.020000	4	2	16.0.0.4	1024	48.0.0.4	←
9	5.010000	5	1	16.0.0.5	1024	48.0.0.5	→
10	5.020000	5	2	16.0.0.5	1024	48.0.0.5	←
11	6.010000	6	1	16.0.0.6	1024	48.0.0.6	→
12	6.020000	6	2	16.0.0.6	1024	48.0.0.6	←
13	7.010000	7	1	16.0.0.7	1024	48.0.0.7	→
14	7.020000	7	2	16.0.0.7	1024	48.0.0.7	←
15	8.010000	8	1	16.0.0.8	1024	48.0.0.8	→
16	8.020000	8	2	16.0.0.8	1024	48.0.0.8	←
17	9.010000	9	1	16.0.0.9	1024	48.0.0.9	→
18	9.020000	9	2	16.0.0.9	1024	48.0.0.9	←
19	10.010000	a	1	16.0.0.10	1024	48.0.0.10	→
20	10.020000	a	2	16.0.0.10	1024	48.0.0.10	←

where: fid:: Flow ID - different IDs for each flow.

#### low-pkt-id

Packet ID within the flow. Numbering begins with 1.

#### client\_ip

Client IP address.

#### client\_port

Client IP port.

#### server\_ip

Server IP address.

#### direction

Direction. "→" is client-to-server; "←" is server-to-client.

The following enlarges the CPS and reduces the duration.

```
[bash]>more cap2/dns_test.yaml
- duration : 1.0
  generator :
    distribution : "seq"
    clients_start : "16.0.0.1"
    clients_end   : "16.0.0.255"
    servers_start : "48.0.0.1"
    servers_end   : "48.0.0.255"
    clients_per_gb : 201
    min_clients    : 101
    dual_port_mask : "1.0.0.0"
    tcp_aging      : 1
    udp_aging      : 1
  mac             : [0x00,0x00,0x00,0x01,0x00,0x00]
  cap_info :
    - name: cap2/dns.pcap
```

```

cps : 10.0
ipg : 50000
rtt : 50000
w   : 1

```

②  
③

- ① Duration is 1 second.
- ② CPS is 10.0.
- ③ IPG is 50 msec.

Running this produces the following output:

```
[bash]> ./bp-sim-32-debug -f cap2/dns_test.yaml -o my.erf -v 3
```

Table 4.2: Formated results

pkt	time sec	template	fid	flow-pkt-id	client_ip	client_port	server_ip	desc
1	0.010000	0	1	1	16.0.0.1	1024	48.0.0.1	→
2	0.060000	0	1	2	16.0.0.1	1024	48.0.0.1	←
3	0.210000	0	2	1	16.0.0.2	1024	48.0.0.2	→
4	0.260000	0	2	2	16.0.0.2	1024	48.0.0.2	←
5	0.310000	0	3	1	16.0.0.3	1024	48.0.0.3	→
6	0.360000	0	3	2	16.0.0.3	1024	48.0.0.3	←
7	0.410000	0	4	1	16.0.0.4	1024	48.0.0.4	→
8	0.460000	0	4	2	16.0.0.4	1024	48.0.0.4	←
9	0.510000	0	5	1	16.0.0.5	1024	48.0.0.5	→
10	0.560000	0	5	2	16.0.0.5	1024	48.0.0.5	←
11	0.610000	0	6	1	16.0.0.6	1024	48.0.0.6	→
12	0.660000	0	6	2	16.0.0.6	1024	48.0.0.6	←
13	0.710000	0	7	1	16.0.0.7	1024	48.0.0.7	→
14	0.760000	0	7	2	16.0.0.7	1024	48.0.0.7	←
15	0.810000	0	8	1	16.0.0.8	1024	48.0.0.8	→
16	0.860000	0	8	2	16.0.0.8	1024	48.0.0.8	←
17	0.910000	0	9	1	16.0.0.9	1024	48.0.0.9	→
18	0.960000	0	9	2	16.0.0.9	1024	48.0.0.9	←
19	1.010000	0	a	1	16.0.0.10	1024	48.0.0.10	→
20	1.060000	0	a	2	16.0.0.10	1024	48.0.0.10	←

Use the following to display the output as a chart, with: x axis: time (seconds) y axis: flow ID The output indicates that there are 10 flows in 1 second, as expected, and the IPG is 50 msec

---

#### Note

Note the gap in the second flow generation. This is an expected schedular artifact and does not have an effect.

---

## 4.2 DNS, take flow IPG from pcap file

In the following example the IPG is taken from the IPG itself.

---

```

- duration : 1.0
  generator :
    distribution : "seq"
    clients_start : "16.0.0.1"
    clients_end : "16.0.0.255"
    servers_start : "48.0.0.1"
    servers_end : "48.0.0.255"
    clients_per_gb : 201
    min_clients : 101
    dual_port_mask : "1.0.0.0"
    tcp_aging : 0
    udp_aging : 0
  mac : [0x00,0x00,0x00,0x01,0x00,0x00]
  cap_ipg : true ❶
  #cap_ipg_min : 30
  #cap_override_ipg : 200
  cap_info :
    - name: cap2/dns.pcap
      cps : 10.0
      ipg : 10000
      rtt : 10000
      w : 1

```

- ❶ IPG is taken from pcap.

Table 4.3: dns ipg from pcap file

pkt	time sec	template	fid	flow-pkt-id	client_ip	client_port	server_ip	desc
1	0.010000	0	1	1	16.0.0.1	1024	48.0.0.1	→
2	0.030944	0	1	2	16.0.0.1	1024	48.0.0.1	←
3	0.210000	0	2	1	16.0.0.2	1024	48.0.0.2	→
4	0.230944	0	2	2	16.0.0.2	1024	48.0.0.2	←
5	0.310000	0	3	1	16.0.0.3	1024	48.0.0.3	→
6	0.330944	0	3	2	16.0.0.3	1024	48.0.0.3	←
7	0.410000	0	4	1	16.0.0.4	1024	48.0.0.4	→
8	0.430944	0	4	2	16.0.0.4	1024	48.0.0.4	←
9	0.510000	0	5	1	16.0.0.5	1024	48.0.0.5	→
10	0.530944	0	5	2	16.0.0.5	1024	48.0.0.5	←
11	0.610000	0	6	1	16.0.0.6	1024	48.0.0.6	→
12	0.630944	0	6	2	16.0.0.6	1024	48.0.0.6	←
13	0.710000	0	7	1	16.0.0.7	1024	48.0.0.7	→
14	0.730944	0	7	2	16.0.0.7	1024	48.0.0.7	←
15	0.810000	0	8	1	16.0.0.8	1024	48.0.0.8	→
16	0.830944	0	8	2	16.0.0.8	1024	48.0.0.8	←
17	0.910000	0	9	1	16.0.0.9	1024	48.0.0.9	→
18	0.930944	0	9	2	16.0.0.9	1024	48.0.0.9	←
19	1.010000	0	a	1	16.0.0.10	1024	48.0.0.10	→
20	1.030944	0	a	2	16.0.0.10	1024	48.0.0.10	←

In this example, the IPG was taken from the pcap file, which is closer to 20 msec and not 50 msec (taken from the configuration file).

```
#cap_ipg_min : 30
```

❶

```
#cap_override_ipg      : 200 ❷
```

- ❶ Sets the minimum IPG (microseconds) which should be override : ( if (pkt\_ipg<cap\_ipg\_min) { pkt\_ipg = cap\_override\_ipg } )
- ❷ Value to override (microseconds).

### 4.3 DNS, Set one server ip

In this example the server IP is taken from the template.

```
- duration : 10.0
generator :
  distribution : "seq"
  clients_start : "16.0.0.1"
  clients_end   : "16.0.1.255"
  servers_start : "48.0.0.1"
  servers_end   : "48.0.0.255"
  clients_per_gb : 201
  min_clients    : 101
  dual_port_mask : "1.0.0.0"
  tcp_aging      : 1
  udp_aging      : 1
mac             : [0x00,0x00,0x00,0x01,0x00,0x00]
cap_ipg         : true
#cap_ipg_min    : 30
#cap_override_ipg : 200
cap_info :
  - name: cap2/dns.pcap
    cps : 1.0
    ipg : 10000
    rtt : 10000
    server_addr : "48.0.0.7" ❶
    one_app_server : true ❷
    w : 1
```

- ❶ All templates will use the same server.
- ❷ Must be set to "true".

Table 4.4: dns ipg from pcap file

pkt	time sec	fid	flow-pkt-id	client_ip	client_port	server_ip	desc
1	0.010000	1	1	16.0.0.1	1024	48.0.0.7	→
2	0.030944	1	2	16.0.0.1	1024	48.0.0.7	←
3	2.010000	2	1	16.0.0.2	1024	48.0.0.7	→
4	2.030944	2	2	16.0.0.2	1024	48.0.0.7	←
5	3.010000	3	1	16.0.0.3	1024	48.0.0.7	→
6	3.030944	3	2	16.0.0.3	1024	48.0.0.7	←
7	4.010000	4	1	16.0.0.4	1024	48.0.0.7	→
8	4.030944	4	2	16.0.0.4	1024	48.0.0.7	←
9	5.010000	5	1	16.0.0.5	1024	48.0.0.7	→
10	5.030944	5	2	16.0.0.5	1024	48.0.0.7	←
11	6.010000	6	1	16.0.0.6	1024	48.0.0.7	→
12	6.030944	6	2	16.0.0.6	1024	48.0.0.7	←

Table 4.4: (continued)

pkt	time sec	fid	flow-pkt-id	client_ip	client_port	server_ip	desc
13	7.010000	7	1	16.0.0.7	1024	48.0.0.7	→
14	7.030944	7	2	16.0.0.7	1024	48.0.0.7	←
15	8.010000	8	1	16.0.0.8	1024	48.0.0.7	→
16	8.030944	8	2	16.0.0.8	1024	48.0.0.7	←
17	9.010000	9	1	16.0.0.9	1024	48.0.0.7	→
18	9.030944	9	2	16.0.0.9	1024	48.0.0.7	←
19	10.010000	a	1	16.0.0.10	1024	48.0.0.7	→
20	10.030944	a	2	16.0.0.10	1024	48.0.0.7	←

## 4.4 DNS, Reduce the number of clients

```

- duration : 10.0
generator :
  distribution : "seq"
  clients_start : "16.0.0.1"
  clients_end : "16.0.0.1"
  servers_start : "48.0.0.1"
  servers_end : "48.0.0.3"
  clients_per_gb : 201
  min_clients : 101
  dual_port_mask : "1.0.0.0"
  tcp_aging : 1
  udp_aging : 1
mac : [0x00,0x00,0x00,0x01,0x00,0x00]
cap_ipg : true
#cap_ipg_min : 30
#cap_override_ipg : 200
cap_info :
- name: cap2/dns.pcap
  cps : 1.0
  ipg : 10000
  rtt : 10000
  w : 1

```

- ① Only one client.

Table 4.5: dns ipg from pcap file

pkt	time sec	fid	flow-pkt-id	client_ip	client_port	server_ip	desc
1	0.010000	1	1	16.0.0.1	1024	48.0.0.1	→
2	0.030944	1	2	16.0.0.1	1024	48.0.0.1	←
3	2.010000	2	1	16.0.0.1	1025	48.0.0.2	→
4	2.030944	2	2	16.0.0.1	1025	48.0.0.2	←
5	3.010000	3	1	16.0.0.1	1026	48.0.0.3	→
6	3.030944	3	2	16.0.0.1	1026	48.0.0.3	←
7	4.010000	4	1	16.0.0.1	1027	48.0.0.4	→
8	4.030944	4	2	16.0.0.1	1027	48.0.0.4	←
9	5.010000	5	1	16.0.0.1	1028	48.0.0.5	→



Table 4.5: (continued)

pkt	time sec	fid	flow-pkt-id	client_ip	client_port	server_ip	desc
10	5.030944	5	2	16.0.0.1	1028	48.0.0.5	←
11	6.010000	6	1	16.0.0.1	1029	48.0.0.6	→
12	6.030944	6	2	16.0.0.1	1029	48.0.0.6	←
13	7.010000	7	1	16.0.0.1	1030	48.0.0.7	→
14	7.030944	7	2	16.0.0.1	1030	48.0.0.7	←
15	8.010000	8	1	16.0.0.1	1031	48.0.0.8	→
16	8.030944	8	2	16.0.0.1	1031	48.0.0.8	←
17	9.010000	9	1	16.0.0.1	1032	48.0.0.9	→
18	9.030944	9	2	16.0.0.1	1032	48.0.0.9	←
19	10.010000	a	1	16.0.0.1	1033	48.0.0.10	→
20	10.030944	a	2	16.0.0.1	1033	48.0.0.10	←

In this case there is only one client so only ports are used to distinct the flows you need to be sure that you have enough free sockets when running TRex in high rates

```
Active-flows   :      0 Clients   :      1 ❶ Socket-util : 0.0000 % ❷
Open-flows    :      1 Servers   :     254 Socket   :      1 Socket/Clients : 0.0
drop-rate     :      0.00 bps
```

- ❶ Number of clients
- ❷ sockets utilization (should be lower than 20%, enlarge the number of clients in case of an issue).

## 4.5 DNS, W=1

w is a tunable to the IP clients/servers generator. w=1 is the default behavior. Setting w=2 configures a burst of two allocations from the same client. See the following example.

```
- duration : 10.0
generator :
  distribution : "seq"
  clients_start : "16.0.0.1"
  clients_end   : "16.0.0.10"
  servers_start : "48.0.0.1"
  servers_end   : "48.0.0.3"
  clients_per_gb : 201
  min_clients   : 101
  dual_port_mask : "1.0.0.0"
  tcp_aging     : 1
  udp_aging     : 1
mac            : [0x00,0x00,0x00,0x01,0x00,0x00]
cap_ipg       : true
#cap_ipg_min   : 30
#cap_override_ipg : 200
cap_info :
  - name: cap2/dns.pcap
    cps : 1.0
    ipg : 10000
    rtt : 10000
    w   : 2 ❶
```

- ① Two clients will be allocated from the same template.

Table 4.6: DNS ipg from pcap file

pkt	time sec	fid	flow-pkt-id	client_ip	client_port	server_ip	desc
1	0.010000	1	1	16.0.0.1	1024	48.0.0.1	→
2	0.030944	1	2	16.0.0.1	1024	48.0.0.1	←
3	2.010000	2	1	16.0.0.1	1025	48.0.0.1	→
4	2.030944	2	2	16.0.0.1	1025	48.0.0.1	←
5	3.010000	3	1	16.0.0.2	1024	48.0.0.2	→
6	3.030944	3	2	16.0.0.2	1024	48.0.0.2	←
7	4.010000	4	1	16.0.0.2	1025	48.0.0.2	→
8	4.030944	4	2	16.0.0.2	1025	48.0.0.2	←
9	5.010000	5	1	16.0.0.3	1024	48.0.0.3	→
10	5.030944	5	2	16.0.0.3	1024	48.0.0.3	←
11	6.010000	6	1	16.0.0.3	1025	48.0.0.3	→
12	6.030944	6	2	16.0.0.3	1025	48.0.0.3	←
13	7.010000	7	1	16.0.0.4	1024	48.0.0.4	→
14	7.030944	7	2	16.0.0.4	1024	48.0.0.4	←
15	8.010000	8	1	16.0.0.4	1025	48.0.0.4	→
16	8.030944	8	2	16.0.0.4	1025	48.0.0.4	←
17	9.010000	9	1	16.0.0.5	1024	48.0.0.5	→
18	9.030944	9	2	16.0.0.5	1024	48.0.0.5	←
19	10.010000	a	1	16.0.0.5	1025	48.0.0.5	→
20	10.030944	a	2	16.0.0.5	1025	48.0.0.5	←

## 4.6 Mixing HTTP and DNS templates

The following example combines elements of HTTP and DNS templates:

```
- duration : 1.0
generator :
  distribution : "seq"
  clients_start : "16.0.0.1"
  clients_end : "16.0.0.10"
  servers_start : "48.0.0.1"
  servers_end : "48.0.0.3"
  clients_per_gb : 201
  min_clients : 101
  dual_port_mask : "1.0.0.0"
  tcp_aging : 1
  udp_aging : 1
mac : [0x00,0x00,0x00,0x01,0x00,0x00]
cap_ipg : true
cap_info :
  - name: cap2/dns.pcap
    cps : 10.0
    ipg : 10000
    rtt : 10000
    w : 1
  - name: avl/delay_10_http_browsing_0.pcap
    cps : 2.0
    ipg : 10000
    rtt : 10000
    w : 1
```

1, 2 Same CPS for both templates.

This creates the following output:

Table 4.7: DNS ipg from pcap file

pkt	time sec	template	fid	flow-pkt-id	client_ip	client_port	server_ip	desc
1	0.010000	0	1	1	16.0.0.1	1024	48.0.0.1	→
2	0.030944	0	1	2	16.0.0.1	1024	48.0.0.1	←
3	0.093333	1	2	1	16.0.0.2	1024	48.0.0.2	→
4	0.104362	1	2	2	16.0.0.2	1024	48.0.0.2	←
5	0.115385	1	2	3	16.0.0.2	1024	48.0.0.2	→
6	0.115394	1	2	4	16.0.0.2	1024	48.0.0.2	→
7	0.126471	1	2	5	16.0.0.2	1024	48.0.0.2	←
8	0.126484	1	2	6	16.0.0.2	1024	48.0.0.2	←
9	0.137530	1	2	7	16.0.0.2	1024	48.0.0.2	→
10	0.148609	1	2	8	16.0.0.2	1024	48.0.0.2	←
11	0.148621	1	2	9	16.0.0.2	1024	48.0.0.2	←
12	0.148635	1	2	10	16.0.0.2	1024	48.0.0.2	←
13	0.159663	1	2	11	16.0.0.2	1024	48.0.0.2	→
14	0.170750	1	2	12	16.0.0.2	1024	48.0.0.2	←
15	0.170762	1	2	13	16.0.0.2	1024	48.0.0.2	←
16	0.170774	1	2	14	16.0.0.2	1024	48.0.0.2	←
17	0.176667	0	3	1	16.0.0.3	1024	48.0.0.3	→
18	0.181805	1	2	15	16.0.0.2	1024	48.0.0.2	→
19	0.181815	1	2	16	16.0.0.2	1024	48.0.0.2	→
20	0.192889	1	2	17	16.0.0.2	1024	48.0.0.2	←
21	0.192902	1	2	18	16.0.0.2	1024	48.0.0.2	←

#### Template\_id

0: DNS template 1: HTTP template

The output above illustrates two HTTP flows and ten DNS flows in 1 second, as expected.

## 4.7 SFR traffic YAML

SFR traffic includes a combination of traffic templates. This traffic mix in the example below was defined by SFR France. This SFR traffic profile is used as our traffic profile for our ASR1k/ISR-G2 benchmark. It is also possible to use EMIX instead of IMIX traffic.

The traffic was recorded from a Spirent C100 with a Pagent that introduce 10msec delay from client and server side.

```
- duration : 0.1
  generator :
    distribution : "seq"
    clients_start : "16.0.0.1"
    clients_end : "16.0.1.255"
    servers_start : "48.0.0.1"
    servers_end : "48.0.20.255"
    clients_per_gb : 201
    min_clients : 101
    dual_port_mask : "1.0.0.0"
```

```
    tcp_aging      : 0
    udp_aging      : 0
mac      : [0x0,0x0,0x0,0x1,0x0,0x00]
cap_ipg  : true
cap_info :
- name: avl/delay_10_http_get_0.pcap
  cps : 404.52
  ipg : 10000
  rtt : 10000
  w   : 1
- name: avl/delay_10_http_post_0.pcap
  cps : 404.52
  ipg : 10000
  rtt : 10000
  w   : 1
- name: avl/delay_10_https_0.pcap
  cps : 130.8745
  ipg : 10000
  rtt : 10000
  w   : 1
- name: avl/delay_10_http_browsing_0.pcap
  cps : 709.89
  ipg : 10000
  rtt : 10000
  w   : 1
- name: avl/delay_10_exchange_0.pcap
  cps : 253.81
  ipg : 10000
  rtt : 10000
  w   : 1
- name: avl/delay_10_mail_pop_0.pcap
  cps : 4.759
  ipg : 10000
  rtt : 10000
  w   : 1
- name: avl/delay_10_mail_pop_1.pcap
  cps : 4.759
  ipg : 10000
  rtt : 10000
  w   : 1
- name: avl/delay_10_mail_pop_2.pcap
  cps : 4.759
  ipg : 10000
  rtt : 10000
  w   : 1
- name: avl/delay_10_oracle_0.pcap
  cps : 79.3178
  ipg : 10000
  rtt : 10000
  w   : 1
- name: avl/delay_10_rtp_160k_full.pcap
  cps : 2.776
  ipg : 10000
  rtt : 10000
  w   : 1
  one_app_server : false
  plugin_id      : 1
- name: avl/delay_10_rtp_250k_full.pcap
  cps : 1.982
  ipg : 10000
  rtt : 10000
  w   : 1
```

```

    one_app_server : false
    plugin_id : 1
- name: avl/delay_10_smtp_0.pcap
  cps : 7.3369
  ipg : 10000
  rtt : 10000
  w   : 1
- name: avl/delay_10_smtp_1.pcap
  cps : 7.3369
  ipg : 10000
  rtt : 10000
  w   : 1
- name: avl/delay_10_smtp_2.pcap
  cps : 7.3369
  ipg : 10000
  rtt : 10000
  w   : 1
- name: avl/delay_10_video_call_0.pcap
  cps : 11.8976
  ipg : 10000
  rtt : 10000
  w   : 1
  one_app_server : false
- name: avl/delay_10_sip_video_call_full.pcap
  cps : 29.347
  ipg : 10000
  rtt : 10000
  w   : 1
  plugin_id : 2 ②
  one_app_server : false
- name: avl/delay_10_citrix_0.pcap
  cps : 43.6248
  ipg : 10000
  rtt : 10000
  w   : 1
- name: avl/delay_10_dns_0.pcap
  cps : 1975.015
  ipg : 10000
  rtt : 10000
  w   : 1

```

- ② Plugin for SIP protocol, used to replace the IP/port in the control flow base on the data-flow.
- ① Plugin for RTSP protocol used to replace the IP/port in the control flow base on the data-flow.

## 4.8 Running examples

TRex commands typically include the following main arguments, but only `-f` is required.

```
[bash]>sudo /t-rex-64 -f <traffic_yaml> -m <multiplier> -d <duration> -l <latency test <-
rate> -c <cores>
```

Full command line reference can be found [here \[cml-line\]](#)

### 4.8.1 TRex command line examples

**Simple HTTP 1Gb/sec for 100 sec**

```
[bash]>sudo ./t-rex-64 -f cap2/simple_http.yaml -c 4 -m 100 -d 100
```

### Simple HTTP 1Gb/sec with latency for 100 sec

```
[bash]>sudo ./t-rex-64 -f cap2/simple_http.yaml -c 4 -m 100 -d 100 -l 1000
```

### SFR 35Gb/sec traffic

```
[bash]>sudo ./t-rex-64 -f avl/sfr_delay_10_1g.yaml -c 4 -m 35 -d 100 -p
```

### SFR 20Gb/sec traffic with latency

```
[bash]>sudo ./t-rex-64 -f avl/sfr_delay_10_1g.yaml -c 4 -m 20 -d 100 -l 1000
```

### SFR ipv6 20Gb/sec traffic with latency

```
[bash]>sudo ./t-rex-64 -f avl/sfr_delay_10_1g_no_bundeling.yaml -c 4 -m 20 -d 100 -l 1000 --ipv6 ←  
--ipv6
```

### Simple HTTP 1Gb/sec with NAT translation support

```
[bash]>sudo ./t-rex-64 -f cap2/simple_http.yaml -c 4 -m 100 -d 100 -l 1000 --learn-mode 1
```

### IMIX 1G/sec ,1600 flows

```
[bash]>sudo ./t-rex-64 -f cap2/imix_fast_1g.yaml -c 4 -m 1 -d 100 -l 1000
```

### IMIX 1Gb/sec,100K flows

```
[bash]>sudo ./t-rex-64 -f cap2/imix_fast_1g_100k.yaml -c 4 -m 1 -d 100 -l 1000
```

### 64bytes ~1Gb/sec,1600 flows

```
[bash]>sudo ./t-rex-64 -f cap2/imix_64.yaml -c 4 -m 1 -d 100 -l 1000
```

## 4.9 Traffic profiles provided with the TRex package

name	description
cap2/dns.yaml	simple dns pcap file
cap2/http_simple.yaml	simple http cap file
avl/sfr_delay_10_1g_no_bundeling.yaml	sig. traffic profile capture from Avalanche - Spirent without bundeling support with RTT=10msec ( a delay machine), this can be used with --ipv6 and --learn-mode
avl/sfr_delay_10_1g.yaml	head-end sfr traffic profile capture from Avalanche - Spirent with bundeling support with RTT=10msec ( a delay machine), it is normalized to 1Gb/sec for m=1
avl/sfr_branch_profile_delay_10.yaml	branch sfr profile capture from Avalanche - Spirent with bundeling support with RTT=10msec it, is normalized to 1Gb/sec for m=1
cap2/imix_fast_1g.yaml	imix profile with 1600 flows normalized to 1Gb/sec.
cap2/imix_fast_1g_100k_flows.yaml	imix profile with 100k flows normalized to 1Gb/sec.
cap2/imix_64.yaml	64byte UDP packets profile

## 4.10 Mimicking stateless traffic under stateful mode

### Note

TRex supports also true stateless traffic generation. If you are looking for stateless traffic, please visit the following link: [TRex Stateless Support \[?\]](#)

With this feature you can "repeat" flows and create stateless, **IXIA** like streams. After injecting the number of flows defined by `limit`, TRex repeats the same flows. If all templates have `limit` the CPS will be zero after some time as there are no new flows after the first iteration.

### IMIX support:

Example:

```
[bash]>sudo ./t-rex-64 -f cap2/imix_64.yaml -d 1000 -m 40000 -c 4 -p
```



### Warning

The `-p` is used here to send the client side packets from both interfaces. (Normally it is sent from client ports only.) With this option, the port is selected by the client IP. All the packets of a flow are sent from the same interface. This may create an issue with routing, as the client's IP will be sent from the server interface. PBR router configuration solves this issue but cannot be used in all cases. So use this `-p` option carefully.

### imix\_64.yaml

```
cap_info :
  - name: cap2/udp_64B.pcap
    cps   : 1000.0
    ipg   : 10000
    rtt   : 10000
    w     : 1
    limit : 1000
```

- Repeats the flows in a loop, generating 1000 flows from this type. In this example, `udp_64B` includes only one packet.

The cap file "cap2/udp\_64B.pcap" includes only one packet of 64B. This configuration file creates 1000 flows that will be repeated as follows: `f1, f2, f3 ... f1000, f1, f2 ...` where the PPS == CPS for `-m=1`. In this case it will have PPS=1000 in sec for `-m=1`. It is possible to mix stateless templates and stateful templates.

### Imix YAML cap2/imix\_fast\_1g.yaml example

```
- duration : 3
  generator :
    distribution : "seq"
    clients_start : "16.0.0.1"
    clients_end   : "16.0.0.255"
    servers_start : "48.0.0.1"
    servers_end   : "48.0.255.255"
    clients_per_gb : 201
    min_clients    : 101
    dual_port_mask : "1.0.0.0"
    tcp_aging      : 0
    udp_aging      : 0
  mac          : [0x0,0x0,0x0,0x1,0x0,0x00]
  cap_info :
    - name: cap2/udp_64B.pcap
```



```
    cps : 90615
    ipg : 10000
    rtt : 10000
    w   : 1
    limit : 199
- name: cap2/udp_576B.pcap
  cps : 64725
  ipg : 10000
  rtt : 10000
  w   : 1
  limit : 199
- name: cap2/udp_1500B.pcap
  cps : 12945
  ipg : 10000
  rtt : 10000
  w   : 1
  limit : 199
- name: cap2/udp_64B.pcap
  cps : 90615
  ipg : 10000
  rtt : 10000
  w   : 1
  limit : 199
- name: cap2/udp_576B.pcap
  cps : 64725
  ipg : 10000
  rtt : 10000
  w   : 1
  limit : 199
- name: cap2/udp_1500B.pcap
  cps : 12945
  ipg : 10000
  rtt : 10000
  w   : 1
  limit : 199
```

The templates are duplicated here to better utilize DRAM and to get better performance.

#### Imix YAML cap2/imix\_fast\_1g\_100k\_flows.yaml example

```
- duration : 3
  generator :
    distribution : "seq"
    clients_start : "16.0.0.1"
    clients_end   : "16.0.0.255"
    servers_start : "48.0.0.1"
    servers_end   : "48.0.255.255"
    clients_per_gb : 201
    min_clients    : 101
    dual_port_mask : "1.0.0.0"
    tcp_aging      : 0
    udp_aging      : 0
  mac          : [0x0,0x0,0x0,0x1,0x0,0x00]
  cap_info :
    - name: cap2/udp_64B.pcap
      cps : 90615
      ipg : 10000
      rtt : 10000
      w   : 1
      limit : 16666
    - name: cap2/udp_576B.pcap
      cps : 64725
```

```

    ipg   : 10000
    rtt   : 10000
    w     : 1
    limit : 16666
- name: cap2/udp_1500B.pcap
  cps   : 12945
  ipg   : 10000
  rtt   : 10000
  w     : 1
  limit : 16667
- name: cap2/udp_64B.pcap
  cps   : 90615
  ipg   : 10000
  rtt   : 10000
  w     : 1
  limit : 16667
- name: cap2/udp_576B.pcap
  cps   : 64725
  ipg   : 10000
  rtt   : 10000
  w     : 1
  limit : 16667
- name: cap2/udp_1500B.pcap
  cps   : 12945
  ipg   : 10000
  rtt   : 10000
  w     : 1
  limit : 16667

```

The following example of a simple simulation includes 3 flows, with CPS=10.

```

$more cap2/imix_example.yaml
#
# Simple IMIX test (7x64B, 5x576B, 1x1500B)
#
- duration : 3
  generator :
    distribution : "seq"
    clients_start : "16.0.0.1"
    clients_end   : "16.0.0.255"
    servers_start : "48.0.0.1"
    servers_end   : "48.0.255.255"
    clients_per_gb : 201
    min_clients    : 101
    dual_port_mask : "1.0.0.0"
    tcp_aging      : 0
    udp_aging      : 0
  mac           : [0x0,0x0,0x0,0x1,0x0,0x00]
  cap_info :
    - name: cap2/udp_64B.pcap
      cps   : 10.0
      ipg   : 10000
      rtt   : 10000
      w     : 1
      limit : 3

```

① Number of flows: 3

```
[bash]> ./bp-sim-32-debug -f cap2/imix_example.yaml -o my.erf -v 3 > a.txt
```

Table 4.8: IMIX example limit=3

pkt	time sec	template	fid	flow-pkt-id	client_ip	client_port	server_ip	desc
1	0.010000	0	1	1	16.0.0.1	1024	48.0.0.1	→
2	0.210000	0	2	0	16.0.0.2	1024	48.0.0.2	→
3	0.310000	0	3	0	16.0.0.3	1024	48.0.0.3	→
4	0.310000	0	1	0	16.0.0.1	1024	48.0.0.1	→
5	0.510000	0	2	0	16.0.0.2	1024	48.0.0.2	→
6	0.610000	0	3	0	16.0.0.3	1024	48.0.0.3	→
7	0.610000	0	1	0	16.0.0.1	1024	48.0.0.1	→
8	0.810000	0	2	0	16.0.0.2	1024	48.0.0.2	→
9	0.910000	0	1	0	16.0.0.1	1024	48.0.0.1	→
10	0.910000	0	3	0	16.0.0.3	1024	48.0.0.3	→
11	1.110000	0	2	0	16.0.0.2	1024	48.0.0.2	→
12	1.210000	0	3	0	16.0.0.3	1024	48.0.0.3	→
13	1.210000	0	1	0	16.0.0.1	1024	48.0.0.1	→
14	1.410000	0	2	0	16.0.0.2	1024	48.0.0.2	→
15	1.510000	0	1	0	16.0.0.1	1024	48.0.0.1	→
16	1.510000	0	3	0	16.0.0.3	1024	48.0.0.3	→
17	1.710000	0	2	0	16.0.0.2	1024	48.0.0.2	→
18	1.810000	0	3	0	16.0.0.3	1024	48.0.0.3	→
19	1.810000	0	1	0	16.0.0.1	1024	48.0.0.1	→
20	2.010000	0	2	0	16.0.0.2	1024	48.0.0.2	→
21	2.110000	0	1	0	16.0.0.1	1024	48.0.0.1	→
22	2.110000	0	3	0	16.0.0.3	1024	48.0.0.3	→
23	2.310000	0	2	0	16.0.0.2	1024	48.0.0.2	→
24	2.410000	0	3	0	16.0.0.3	1024	48.0.0.3	→
25	2.410000	0	1	0	16.0.0.1	1024	48.0.0.1	→
26	2.610000	0	2	0	16.0.0.2	1024	48.0.0.2	→
27	2.710000	0	1	0	16.0.0.1	1024	48.0.0.1	→
28	2.710000	0	3	0	16.0.0.3	1024	48.0.0.3	→
29	2.910000	0	2	0	16.0.0.2	1024	48.0.0.2	→
30	3.010000	0	3	0	16.0.0.3	1024	48.0.0.3	→
31	3.010000	0	1	0	16.0.0.1	1024	48.0.0.1	→

- Average CPS: 10 packets per second (30 packets in 3 sec).
- Total of 3 flows, as specified in the configuration file.
- The flows come in bursts, as specified in the configuration file.

## 4.11 Clients/Servers IP allocation scheme

Currently, there is one global IP pool for clients and servers. It serves all templates. All templates will allocate IP from this global pool. Each TRex client/server "dual-port" (pair of ports, such as port 0 for client, port 1 for server) has its own generator offset, taken from the config file. The offset is called `dual_port_mask`.

Example:

```
generator :
  distribution : "seq"
  clients_start : "16.0.0.1"
  clients_end   : "16.0.0.255"
```

```
servers_start : "48.0.0.1"
servers_end   : "48.0.0.255"
dual_port_mask : "1.0.0.0"
tcp_aging     : 0
udp_aging     : 0
```

❶

- ❶ Offset to add per port pair. The reason for the “dual\_port\_mask” is to make static route configuration per port possible. With this offset, different ports have different prefixes.

For example, with four ports, TRex will produce the following ip ranges:

```
port pair-0 (0,1) --> C (16.0.0.1-16.0.0.128 ) <-> S( 48.0.0.1 - 48.0.0.128)
port pair-1 (2,3) --> C (17.0.0.129-17.0.0.255 ) <-> S( 49.0.0.129 - 49.0.0.255) + mask ←
("1.0.0.0")
```

- Number of clients : 255
- Number of servers : 255
- The offset defined by “dual\_port\_mask” (1.0.0.0) is added for each port pair, but the total number of clients/servers will remain constant (255), and will not depend on the amount of ports.
- TCP/UDP aging is the time it takes to return the socket to the pool. It is required when the number of clients is very small and the template defines a very long duration.

If “dual-port\_mask” was set to 0.0.0.0, both port pairs would have uses the same ip range. For example, with four ports, we would have get the following ip range is :

```
port pair-0 (0,1) --> C (16.0.0.1-16.0.0.128 ) <-> S( 48.0.0.1 - 48.0.0.128)
port pair-1 (2,3) --> C (16.0.0.129-16.0.0.255 ) <-> S( 48.0.0.129 - 48.0.0.255)
```

### Router configuration for this mode:

PBR is not necessary. The following configuration is sufficient.

```
interface TenGigabitEthernet1/0/0 ❶
 mac-address 0000.0001.0000
 mtu 4000
 ip address 11.11.11.11 255.255.255.0
 !
,
interface TenGigabitEthernet1/1/0 ❷
 mac-address 0000.0001.0000
 mtu 4000
 ip address 22.11.11.11 255.255.255.0
 !
interface TenGigabitEthernet1/2/0 ❸
 mac-address 0000.0001.0000
 mtu 4000
 ip address 33.11.11.11 255.255.255.0
 !
interface TenGigabitEthernet1/3/0 ❹
 mac-address 0000.0001.0000
 mtu 4000
 ip address 44.11.11.11 255.255.255.0
 load-interval 30

ip route 16.0.0.0 255.0.0.0 22.11.11.12
ip route 48.0.0.0 255.0.0.0 11.11.11.12
ip route 17.0.0.0 255.0.0.0 44.11.11.12
ip route 49.0.0.0 255.0.0.0 33.11.11.12
```

- ❶ Connected to TRex port 0 (client side)
- ❷ Connected to TRex port 1 (server side)
- ❸ Connected to TRex port 2 (client side)
- ❹ Connected to TRex port 3(server side)

#### One server:

To support a template with one server, you can add “server\_addr” keyword. Each port pair will be get different server IP (According to the “dual\_port\_mask” offset).

```
- name: cap2/dns.pcap
  cps : 1.0
  ipg : 10000
  rtt : 10000
  w   : 1
  server_addr : "48.0.0.1" ❶
  one_app_server : true ❷
```

- ❶ Server IP.
- ❷ Enable one server mode.

In TRex server, you will see the following statistics.

```
Active-flows   :    19509  Clients   :     504  Socket-util : 0.0670 %
Open-flows    :   247395  Servers  :   65408  Socket      : 21277 Socket/Clients ←
                :     42.2
```

---

#### Note

- No backward compatibility with the old generator YAML format.
  - When using -p option, TRex will not comply with the static route rules. Server-side traffic may be sent from the client side (port 0) and vice-versa. If you use the -p option, you must configure policy based routing to pass all traffic from router port 1 to router port 2, and vice versa.
  - [VLAN](#) [?] feature does not comply with static route rules. If you use it, you also need policy based routing rules to pass packets from VLAN0 to VLAN1 and vice versa.
  - Limitation: When using template with plugins (bundles), the number of servers must be higher than the number of clients.
- 

### 4.11.1 More Details about IP allocations

Each time a new flow is created, TRex allocates new Client IP/port and Server IP. This 3-tuple should be distinct among active flows.

Currently, only sequential distribution is supported in IP allocation. This means the IP address is increased by one for each flow.


For example, if we have a pool of two IP addresses: 16.0.0.1 and 16.0.0.2, the allocation of client src/port pairs will be

```
16.0.0.0.1 [1024]
16.0.0.0.2 [1024]
16.0.0.0.1 [1025]
16.0.0.0.2 [1025]
16.0.0.0.1 [1026]
16.0.0.0.2 [1026]
...
```

---

### 4.11.2 How to determine the packet per second(PPS) and Bit per second (BPS)

- Let's look at an example of one flow with 4 packets.
- Green circles represent the first packet of each flow.
- The client ip pool starts from 16.0.0.1, and the distribution is seq.

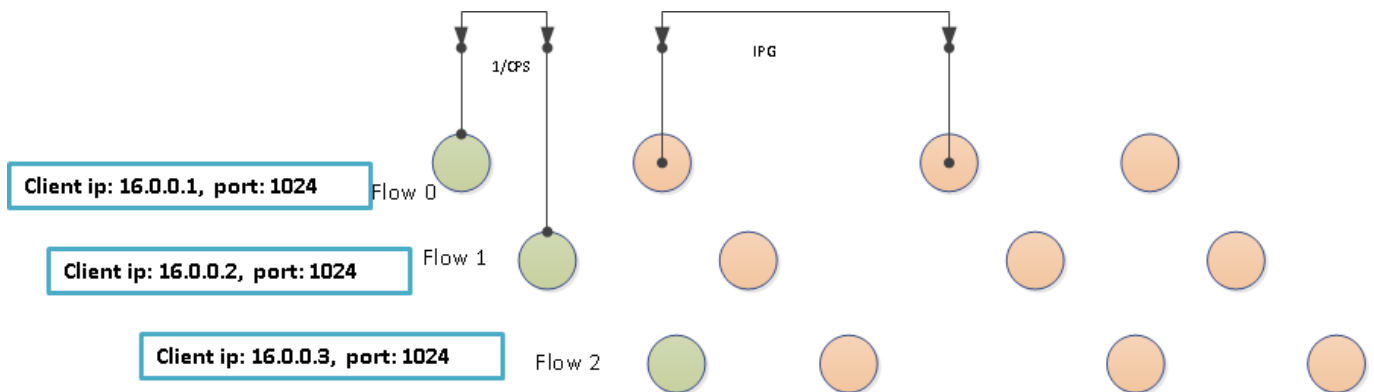

$$TotalPPS = \sum_{k=0}^n (CPS_k \times flow\_pkts_k)$$

$$Concurrent\ flow = \sum_{k=0}^n CPS_k \times flow\_duration_k$$

The above formulas can be used to calculate the PPS. The TRex throughput depends on the PPS calculated above and the value of m (a multiplier given as command line argument -m).

The m value is a multiplier of total pcap files CPS. CPS of pcap file is configured on yaml file.

Let's take a simple example as below.

```
cap_info :
  - name: avl/first.pcap < -- has 2 packets
    cps : 102.0
    ipg : 10000
    rtt : 10000
    w   : 1
  - name: avl/second.pcap < -- has 20 packets
    cps : 50.0
    ipg : 10000
    rtt : 10000
    w   : 1
```

The throughput is:  $m \times (CPS_1 \times flow\_pkts_1 + CPS_2 \times flow\_pkts_2)$

So if the m is set as 1, the total PPS is :  $102 \times 2 + 50 \times 20 = 1204$  PPS.

The BPS depends on the packet size. You can refer to your packet size and get the  $BPS = PPS \times Packet\_size$ .

### 4.11.3 Per template allocation + future plans

- 1) per-template generator

Multiple generators can be defined and assigned to different pcap file templates.

The YAML configuration is something like this:

```

generator :
  distribution : "seq"
  clients_start : "16.0.0.1"
  clients_end : "16.0.1.255"
  servers_start : "48.0.0.1"
  servers_end : "48.0.20.255"
  clients_per_gb : 201
  min_clients : 101
  dual_port_mask : "1.0.0.0"
  tcp_aging : 0
  udp_aging : 0
  generator_clients :
    - name : "c1"
      distribution : "random"
      ip_start : "38.0.0.1"
      ip_end : "38.0.1.255"
      clients_per_gb : 201
      min_clients : 101
      dual_port_mask : "1.0.0.0"
      tcp_aging : 0
      udp_aging : 0
  generator_servers :
    - name : "s1"
      distribution : "seq"
      ip_start : "58.0.0.1"
      ip_end : "58.0.1.255"
      dual_port_mask : "1.0.0.0"
cap_info :
  - name: avl/delay_10_http_get_0.pcap
    cps : 404.52
    ipg : 10000
    rtt : 10000
    w : 1
  - name: avl/delay_10_http_post_0.pcap
    client_pool : "c1"
    server_pool : "s1"
    cps : 404.52
    ipg : 10000
    rtt : 10000
    w : 1

```

- **2) More distributions will be supported in the future (normal distribution for example)**

Currently, only sequence and random are supported.

- **3) Histogram of tuple pool will be supported**

This feature will give the user more flexibility in defining the IP generator.

```

generator :
  client_pools:
    - name : "a"
      distribution : "seq"
      clients_start : "16.0.0.1"
      clients_end : "16.0.1.255"
      tcp_aging : 0
      udp_aging : 0
    - name : "b"

```

```

distribution : "random"
clients_start : 26.0.0.1"
clients_end   : 26.0.1.255"
tcp_aging    : 0
udp_aging    : 0

- name       : "c"
  pools_list :
    - name:"a"
      probability: 0.8
    - name:"b"
      probability: 0.2

```

## 4.12 Measuring Jitter/Latency

To measure jitter/latency using independent flows (SCTP or ICMP), use `-l <Hz>` where Hz defines the number of packets to send from each port per second. This option measures latency and jitter. We can define the type of traffic used for the latency measurement using the `--l-pkt-mode <0-3>` option.

Option ID	Type
0	<b>default</b> , SCTP packets
1	ICMP echo request packets from both sides
2	Send ICMP requests from one side, and matching ICMP responses from other side. This is particularly useful if your DUT drops traffic from outside, and you need to open pin hole to get the outside traffic in (for example when testing a firewall)
3	Send ICMP request packets with a constant 0 sequence number from both sides.

### 4.12.1 Interpreting Jitter/Latency Output

The command output of the `t-rex` utility with latency stats enabled looks similar to the following:

```

-Latency stats enabled
Cpu Utilization : 0.2 %
if|  tx_ok , rx_ok , rx check ,error,          latency (usec) ,      Jitter          max window
  |      ,      ,      , average , max ,      (usec)
-----
0 |    1002,   1002,      0,  0,          51 ,      69,      3 | 0 69 67 ←
  |    ...
1 |    1002,   1002,      0,  0,          53 ,     196,      2 | 0 196 53 ←
  |    ...
2 |    1002,   1002,      0,  0,          54 ,      71,      5 | 0 71 69 ←
  |    ...
3 |    1002,   1002,      0,  0,          53 ,     193,      2 | 0 193 52 ←
  |    ...

```

- ❶ Rx check and latency thread CPU utilization.
- ❷ `tx_ok` on port 0 should equal `rx_ok` on port 1, and vice versa, for all paired ports.
- ❸ Rx check rate as per `--rx-check`. For more information on Rx check, see [Flow order/latency verification \[rx\\_check\]](#) section.
- ❹ Number of packet errors detected. (various reasons, see `stateful_rx_core.cpp`)
- ❺ Average latency (in microseconds) across **all** samples since startup.



- 
- ③ Maximum latency (in microseconds) across **all** samples since startup.
  - ④ Jitter calculated as per RC3550 Appendix-A.8.
  - ⑤ Maximum latency within a sliding window of 500 milliseconds. There are few values shown per port according to terminal width. The odlest value is on the left and most recent value (latest 500msec sample) on the right. This can help in identifying spikes of high latency clearing after some time. Maximum latency (<6>) is the total maximum over the entire test duration. To best understand this, run TRex with the latency option (-l) and watch the results.
-

## Chapter 5

# Advanced features

### 5.1 VLAN (dot1q) support

To add a VLAN tag to all traffic generated by TRex, add a “vlan” keyword in each port section in the platform config file, as described in the [Platform YAML \[trex\\_config\\_yaml\\_config\\_file\]](#) section.

You can specify a different VLAN tag for each port, or use VLAN only on some ports.

One useful application of this can be in a lab setup where you have one TRex and many DUTs, and you want to test a different DUT on each run, without changing cable connections. You can put each DUT on a VLAN of its own, and use different TRex platform configuration files with different VLANs on each run.

### 5.2 Utilizing maximum port bandwidth in case of asymmetric traffic profile

---

#### Note

If you want simple VLAN support, this is probably **not** the feature to use. This feature is used for load balancing. To configure VLAN support, see the “vlan” field in the [Platform YAML \[trex\\_config\\_yaml\\_config\\_file\]](#) section.

---

The VLAN Trunk TRex feature attempts to solve the router port bandwidth limitation when the traffic profile is asymmetric (example: Asymmetric SFR profile).

This feature converts asymmetric traffic to symmetric, from the port perspective, using router sub-interfaces. This requires TRex to send the traffic on two VLANs, as described below.

**YAML format - This goes in the traffic YAML file.**

```
vlan      : { enable : 1 , vlan0 : 100 , vlan1 : 200 }
```

#### Example

```
- duration : 0.1
  vlan      : { enable : 1 , vlan0 : 100 , vlan1 : 200 } ⓘ
```

- ⓘ Enable load balance feature: vlan0==100 , vlan1==200  
For a full file example, see the TRex source in: `scripts/cap2/ipv4_load_balance.yaml`

**Problem definition:**

Scenario: TRex with two ports and an SFR traffic profile.

**Without VLAN/sub interfaces, all client emulated traffic is sent on port 0, and all server emulated traffic (example: HTTP response) on port 1.**

```
TRex port 0 ( client) <-> [ DUT ] <-> TRex port 1 ( server)
```

Without VLAN support, the traffic is asymmetric. 10% of the traffic is sent from port 0 (client side), 90% from port 1 (server). Port 1 is the bottleneck (10Gb/s limit).

**With VLAN/sub interfaces**

```
TRex port 0 ( client VLAN0) <-> | DUT | <-> TRex port 1 ( server-VLAN0)
TRex port 0 ( server VLAN1) <-> | DUT | <-> TRex port 1 ( client-VLAN1)
```

In this case, traffic on vlan0 is sent as before, while for traffic on vlan1, the order is reversed (client traffic sent on port1 and server traffic on port0). TRex divides the flows evenly between the vlans. This results in an equal amount of traffic on each port.

**Router configuration:**

```
!
interface TenGigabitEthernet1/0/0 ❶
  mac-address 0000.0001.0000
  mtu 4000
  no ip address
  load-interval 30
!
i
interface TenGigabitEthernet1/0/0.100 ❷
  encapsulation dot1Q 100
  ip address 11.77.11.1 255.255.255.0
  ip nbar protocol-discovery
  ip policy route-map vlan_100_p1_to_p2 ❸
!
interface TenGigabitEthernet1/0/0.200 ❹
  encapsulation dot1Q 200
  ip address 11.88.11.1 255.255.255.0
  ip nbar protocol-discovery
  ip policy route-map vlan_200_p1_to_p2 ❺
!
interface TenGigabitEthernet1/1/0
  mac-address 0000.0001.0000
  mtu 4000
  no ip address
  load-interval 30
!
interface TenGigabitEthernet1/1/0.100
  encapsulation dot1Q 100
  ip address 22.77.11.1 255.255.255.0
  ip nbar protocol-discovery
  ip policy route-map vlan_100_p2_to_p1
!
interface TenGigabitEthernet1/1/0.200
  encapsulation dot1Q 200
  ip address 22.88.11.1 255.255.255.0
  ip nbar protocol-discovery
  ip policy route-map vlan_200_p2_to_p1
!
```

```

arp 11.77.11.12 0000.0001.0000 ARPA ❸
arp 22.77.11.12 0000.0001.0000 ARPA

route-map vlan_100_p1_to_p2 permit 10 ❷
  set ip next-hop 22.77.11.12
!
route-map vlan_100_p2_to_p1 permit 10
  set ip next-hop 11.77.11.12
!

route-map vlan_200_p1_to_p2 permit 10
  set ip next-hop 22.88.11.12
!
route-map vlan_200_p2_to_p1 permit 10
  set ip next-hop 11.88.11.12
!
```

- ❶ Main interface must not have IP address.
- ❷ Enable VLAN1
- ❸ PBR configuration
- ❹ Enable VLAN2
- ❺ PBR configuration
- ❻ TRex destination port MAC address
- ❼ PBR configuration rules

### 5.3 Static source MAC address setting

With this feature, TRex replaces the source MAC address with the client IP address.

Note: This feature was requested by the Cisco ISG group.

#### YAML:

```
mac_override_by_ip : true
```

#### Example

```
- duration : 0.1
  ..
  mac_override_by_ip : true ❶
```

- ❶ In this case, the client side MAC address looks like this: SRC\_MAC = IPV4(IP) + 00:00

## 5.4 IPv6 support

Support for IPv6 includes:

1. Support for pcap files containing IPv6 packets.
2. Ability to generate IPv6 traffic from pcap files containing IPv4 packets.  
The `--ipv6` command line option enables this feature. The keywords `src_ipv6` and `dst_ipv6` specify the most significant 96 bits of the IPv6 address. Example:

```
- duration : 10
src_ipv6 : [0xFE80,0x0232,0x1002,0x0051,0x0000,0x0000]
dst_ipv6 : [0x2001,0x0DB8,0x0003,0x0004,0x0000,0x0000]
generator :
  distribution : "seq"
  clients_start : "16.0.0.1"
  clients_end : "16.0.1.255"
  servers_start : "48.0.0.1"
  servers_end : "48.0.0.255"
  clients_per_gb : 201
  min_clients : 101
  dual_port_mask : "1.0.0.0"
  tcp_aging : 1
  udp_aging : 1
```

---

### Note

`src_ipv6` and `dst_ipv6` should be in the root scope, not at IP pools.

---

The IPv6 address is formed by placing what would typically be the IPv4 address into the least significant 32 bits and copying the value provided in the `src_ipv6/dst_ipv6` keywords into the most significant 96 bits. If `src_ipv6` and `dst_ipv6` are not specified, the default is to form IPv4-compatible addresses (most significant 96 bits are zero).

There is IPv6 support for all plugins.

### Example:

```
[bash]>sudo ./t-rex-64 -f cap21/sfr_delay_10_1g.yaml -c 4 -p -l 100 -d 100000 -m 30 --ipv6
```

### Limitations:

- TRex cannot generate both IPv4 and IPv6 traffic.
- The `--ipv6` switch must be specified even when using a pcap file containing only IPv6 packets.

### Router configuration:

```
interface TenGigabitEthernet1/0/0
  mac-address 0000.0001.0000
  mtu 4000
  ip address 11.11.11.11 255.255.255.0
  ip policy route-map p1_to_p2
  load-interval 30
  ipv6 enable ==> IPv6
  ipv6 address 2001:DB8:1111:2222::1/64
```

```
ipv6 policy route-map ipv6_p1_to_p2 ❷
!

ipv6 unicast-routing ❸

ipv6 neighbor 3001::2 TenGigabitEthernet0/1/0 0000.0002.0002 ❹
ipv6 neighbor 2001::2 TenGigabitEthernet0/0/0 0000.0003.0002

route-map ipv6_p1_to_p2 permit 10 ❺
 set ipv6 next-hop 2001::2
!
route-map ipv6_p2_to_p1 permit 10
 set ipv6 next-hop 3001::2
!


asr1k(config)#ipv6 route 4000::/64 2001::2
asr1k(config)#ipv6 route 5000::/64 3001::2
```

- ❶ Enable IPv6
- ❷ Add pbr
- ❸ Enable IPv6 routing
- ❹ MAC address setting. Should be TRex MAC.
- ❺ PBR configuraion

## 5.5 Client clustering configuration

TRex supports testing complex topologies with more than one DUT, using a feature called "client clustering". This feature allows specifying the distribution of clients that TRex emulates.

Consider the following topology:

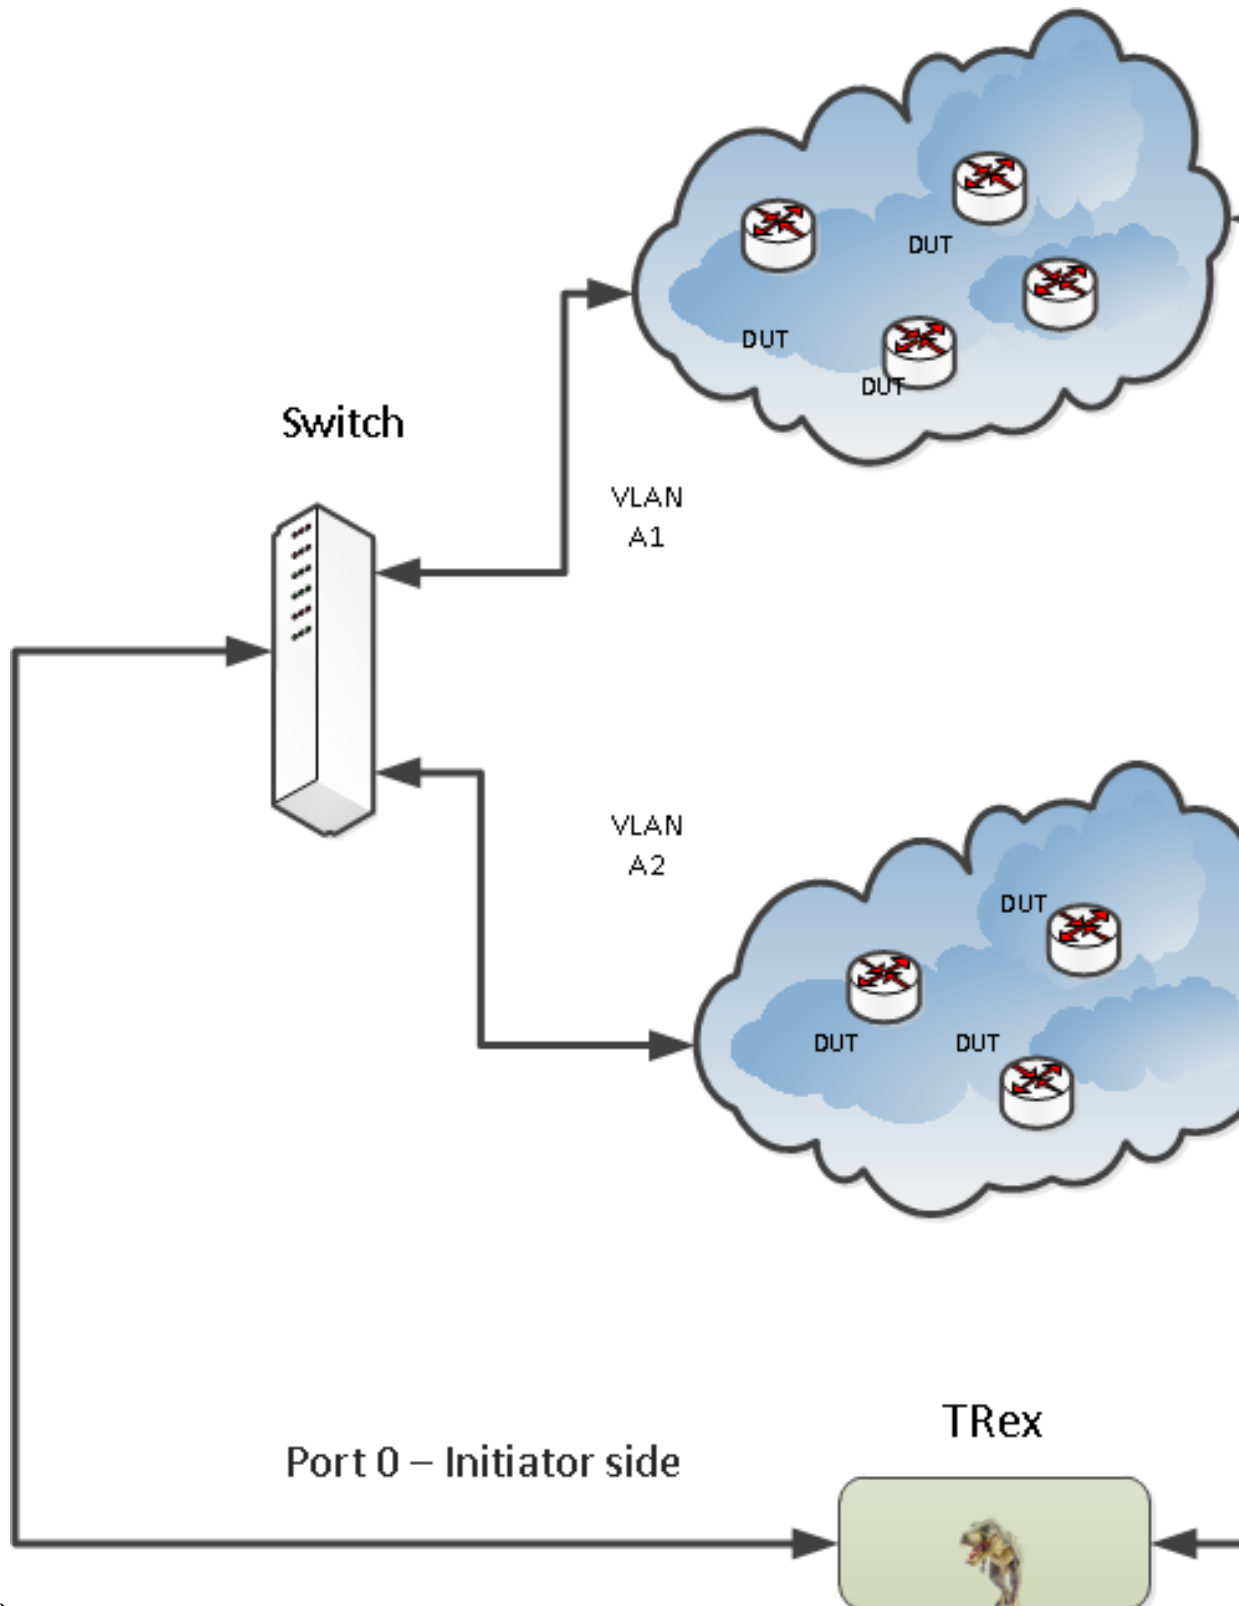

### Topology example

There are two clusters of DUTs. Using the configuration file, you can partition TRex emulated clients into groups, and define how they will be spread between the DUT clusters.

Group configuration includes:

- IP start range.

- IP end range.
- Initiator side configuration: Parameters affecting packets sent from client side.
- Responder side configuration: Parameters affecting packets sent from server side.

---

#### Note

It is important to understand that this is **complimentary** to the client generator configured per profile. It only defines how the clients will be spread between clusters.

---

In the following example, a profile defines a client generator.

```
[bash]>cat cap2/dns.yaml
- duration : 10.0
  generator :
    distribution : "seq"
    clients_start : "16.0.0.1"
    clients_end : "16.0.0.255"
    servers_start : "48.0.0.1"
    servers_end : "48.0.0.255"
    dual_port_mask : "1.0.0.0"
  cap_info :
    - name: cap2/dns.pcap
      cps : 1.0
      ipg : 10000
      rtt : 10000
      w : 1
```

Goal:

- Create two clusters with 4 and 3 devices, respectively.
- Send **80%** of the traffic to the upper cluster and **20%** to the lower cluster. Specify the DUT to which the packet will be sent by MAC address or IP. (The following example uses the MAC address. The instructions after the example indicate how to change to IP-based.)

Create the following cluster configuration file:

```
#
# Client configuration example file
# The file must contain the following fields
#
# 'vlan' - if the entire configuration uses VLAN,
#         each client group must include vlan
#         configuration
#
# 'groups' - each client group must contain range of IPs
#            and initiator and responder section
#            'count' represents the number of different DUTs
#            in the group.
#
# 'true' means each group must contain VLAN configuration. 'false' means no VLAN config ←
#         allowed.
vlan: true

groups:

-   ip_start : 16.0.0.1
    ip_end   : 16.0.0.204
```



```

    initiator :
        vlan      : 100
        dst_mac   : "00:00:00:01:00:00"
    responder :
        vlan      : 200
        dst_mac   : "00:00:00:02:00:00"

    count       : 4
-   ip_start   : 16.0.0.205
    ip_end     : 16.0.0.255
    initiator :
        vlan      : 101
        dst_mac   : "00:00:01:00:00:00"

    responder:
        vlan      : 201
        dst_mac   : "00:00:02:00:00:00"

    count      : 3

```

The above configuration divides the generator range of 255 clients to two clusters. The range of IPs in all groups in the client configuration file must cover the entire range of client IPs from the traffic profile file.

MAC addresses will be allocated incrementally, with a wrap around after “count” addresses.

Example:

**Initiator side (packets with source in 16.x.x.x net):**

- 16.0.0.1 → 48.x.x.x - dst\_mac: 00:00:00:01:00:00 vlan: 100
- 16.0.0.2 → 48.x.x.x - dst\_mac: 00:00:00:01:00:01 vlan: 100
- 16.0.0.3 → 48.x.x.x - dst\_mac: 00:00:00:01:00:02 vlan: 100
- 16.0.0.4 → 48.x.x.x - dst\_mac: 00:00:00:01:00:03 vlan: 100
- 16.0.0.5 → 48.x.x.x - dst\_mac: 00:00:00:01:00:00 vlan: 100
- 16.0.0.6 → 48.x.x.x - dst\_mac: 00:00:00:01:00:01 vlan: 100

**Responder side (packets with source in 48.x.x.x net):**

- 48.x.x.x → 16.0.0.1 - dst\_mac(from responder) : "00:00:00:02:00:00" , vlan:200
- 48.x.x.x → 16.0.0.2 - dst\_mac(from responder) : "00:00:00:02:00:01" , vlan:200

and so on.

The MAC addresses of DUTs must be changed to be sequential. Another option is to replace: `dst_mac : <ip-address>` with:

`next_hop : <ip-address>`

For example, the first group in the configuration file would be:

```

-   ip_start   : 16.0.0.1
    ip_end     : 16.0.0.204
    initiator :
        vlan      : 100
        next_hop  : 1.1.1.1
        src_ip    : 1.1.1.100

```

```

responder :
    vlan      : 200
    next_hop  : 2.2.2.1
    src_ip    : 2.2.2.100

count      : 4

```

In this case, TRex attempts to resolve the following addresses using ARP:

1.1.1.1, 1.1.1.2, 1.1.1.3, 1.1.1.4 (and the range 2.2.2.1-2.2.2.4)

If not all IPs are resolved, TRex exits with an error message.

`src_ip` is used to send **gratuitous ARP**, and for filling relevant fields in ARP request. If no `src_ip` is given, TRex looks for the source IP in the relevant port section in the platform configuration file (`/etc/trex_cfg.yaml`). If none is found, TRex exits with an error message.

If a client config file is given, TRex ignores the `dest_mac` and `default_gw` parameters from the platform configuration file.

Now, streams will look like:

#### Initiator side (packets with source in 16.x.x.x net):

- 16.0.0.1 → 48.x.x.x - `dst_mac`: MAC of 1.1.1.1 `vlan`: 100
- 16.0.0.2 → 48.x.x.x - `dst_mac`: MAC of 1.1.1.2 `vlan`: 100
- 16.0.0.3 → 48.x.x.x - `dst_mac`: MAC of 1.1.1.3 `vlan`: 100
- 16.0.0.4 → 48.x.x.x - `dst_mac`: MAC of 1.1.1.4 `vlan`: 100
- 16.0.0.5 → 48.x.x.x - `dst_mac`: MAC of 1.1.1.1 `vlan`: 100
- 16.0.0.6 → 48.x.x.x - `dst_mac`: MAC of 1.1.1.2 `vlan`: 100

#### Responder side (packets with source in 48.x.x.x net):

- 48.x.x.x → 16.0.0.1 - `dst_mac`: MAC of 2.2.2.1 , `vlan`:200
- 48.x.x.x → 16.0.0.2 - `dst_mac`: MAC of 2.2.2.2 , `vlan`:200

---

#### Note

It is important to understand that the IP to MAC coupling (with either MAC-based or IP-based configuration) is done at the beginning and never changes. For example, in a MAC-based configuration:

- Packets with source IP 16.0.0.2 will always have VLAN 100 and `dst MAC` 00:00:00:01:00:01.
- Packets with destination IP 16.0.0.2 will always have VLAN 200 and `dst MAC` 00:00:00:02:00:01.

Consequently, you can predict exactly which packet (and how many packets) will go to each DUT.

---

#### Usage:

```
[bash]>sudo ./t-rex-64 -f cap2/dns.yaml --client_cfg my_cfg.yaml
```

### 5.5.1 Latency with Cluster mode

Latency streams client IP is taken from the first IP in the default client pool. Each dual port will have one Client IP. In case of cluster configuration this is a limitation as you can have a topology with many paths.

#### Traffic profile

```
- duration : 10.0
  generator :
    distribution : "seq"
    clients_start : "16.0.0.1"
    clients_end : "16.0.0.255"
    servers_start : "48.0.0.1"
    servers_end : "48.0.0.255"
    dual_port_mask : "1.0.0.0"
  cap_info :
    - name: cap2/dns.pcap
      cps : 1.0
      ipg : 10000
      rtt : 10000
      w : 1
```

#### Cluster profile

```
vlan: true

groups:


- ip_start : 16.0.0.1
  ip_end : 16.0.0.204
  initiator :
    vlan : 100
    dst_mac : "00:00:00:01:00:00"
  responder :
    vlan : 200
    dst_mac : "00:00:00:02:00:00"

count : 4
```

For example, in this case 16.0.0.1→48.0.0.1 ICMP will be the flow for latency. The Cluster configuration of this flow will be taken from cluster file ( VLAN=100, dst\_mac : "00:00:00:01:00:00" )

### 5.5.2 Clustering example

In this example we have one DUT with four 10gb interfaces and one TRex with two 40Gb/sec interfaces and we want to convert the traffic from 2 TRex interfaces to 4 DUT Interfaces. The following figure shows the topology

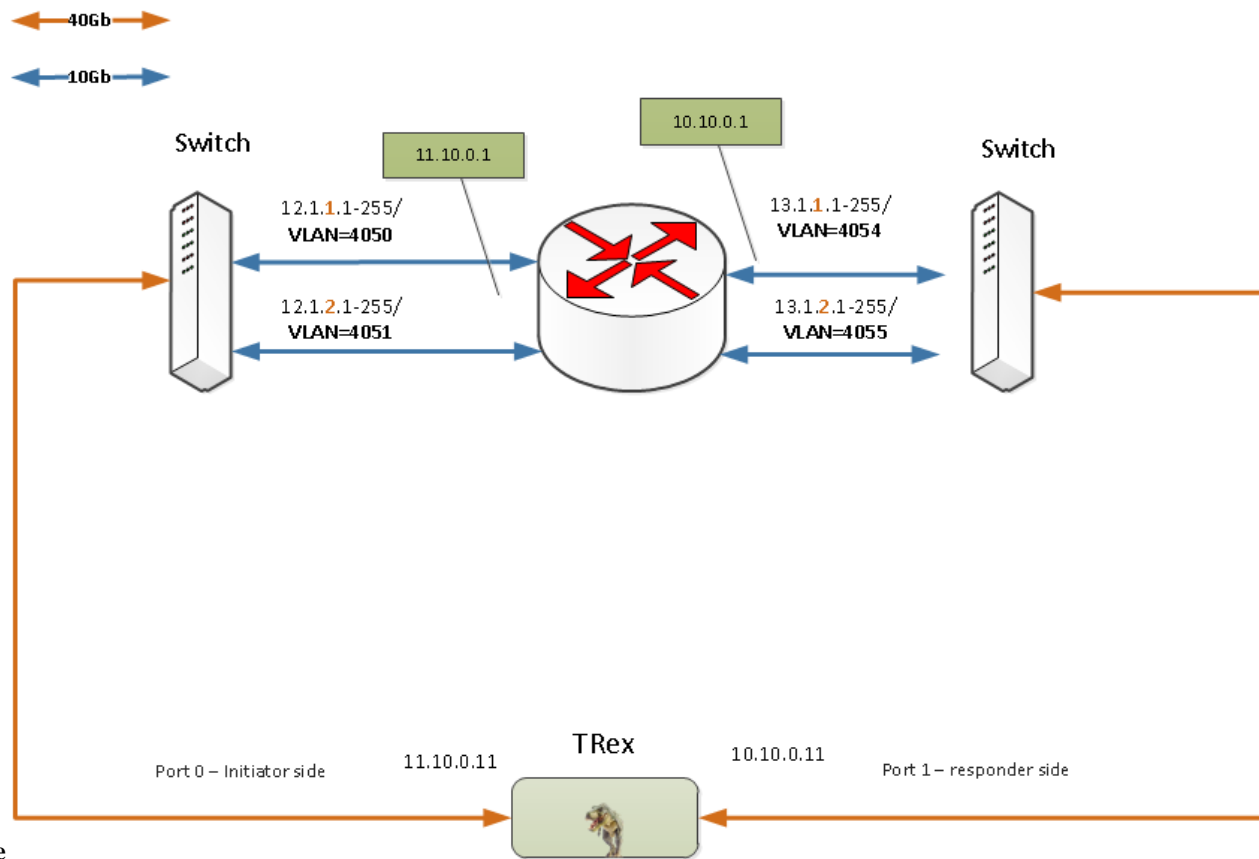

### Cluster example

For this topology the following traffic and cluster configuration file were created

#### Traffic profile

```

- duration : 10.0
generator :
  distribution : "seq"
  clients_start : "12.1.1.1"
  clients_end : "12.1.1.1"
  servers_start : "13.1.1.1"
  servers_end : "13.1.1.1"
  dual_port_mask : "0.1.0.0"
  generator_clients :
    - name : "c1"
      distribution : "seq"
      ip_start : "12.1.1.2"
      ip_end : "12.1.1.255"
    - name : "c2"
      distribution : "seq"
      ip_start : "12.1.2.1"
      ip_end : "12.1.2.255"
  generator_servers :
    - name : "s1"
      distribution : "seq"
      ip_start : "13.1.1.2"
      ip_end : "13.1.1.255"
    - name : "s2"
      distribution : "seq"
      ip_start : "13.1.2.1"
      ip_end : "13.1.2.255"
cap_ipg : true
cap_info :
  - name: file10k.pcap

```

```

client_pool : "c2"
server_pool : "s2"
cps : 1
ipg : 20000
rtt : 20000
w : 1
- name: file10k.pcap
client_pool : "c1"
server_pool : "s1"
cps : 1
ipg : 20000
rtt : 20000
w : 1

```

- ❶ Latency flow will be IP 12.1.1.1<->13.1.1.1/vlan=4050/next-hop=11.10.0.1
- ❷ First clients pool
- ❸ Second clients pool

### Cluster profile

```

lan: true

groups:

- ip_start : 12.1.1.1           ❶
  ip_end   : 12.1.1.255
  initiator :
    vlan    : 4050
    next_hop : 11.10.0.1
    src_ip  : 11.10.0.11
  responder :
    vlan    : 4054
    next_hop : 10.10.0.1
    src_ip  : 10.10.0.11
  count    : 1


- ip_start : 12.1.2.1
  ip_end   : 12.1.2.255
  initiator :
    vlan    : 4051
    next_hop : 11.10.0.2
    src_ip  : 11.10.0.11
  responder :
    vlan    : 4055
    next_hop : 10.10.0.2
    src_ip  : 10.10.0.11
  count    : 1

```

- ❶ All the IPs from client pools and default pool should be mapped in this file, it is possible to have wider range in cluster file

The following diagram shows how new flow src\_ip/dest\_ip/next-hop/vlan is chosen with cluster file

# New Flow Generation

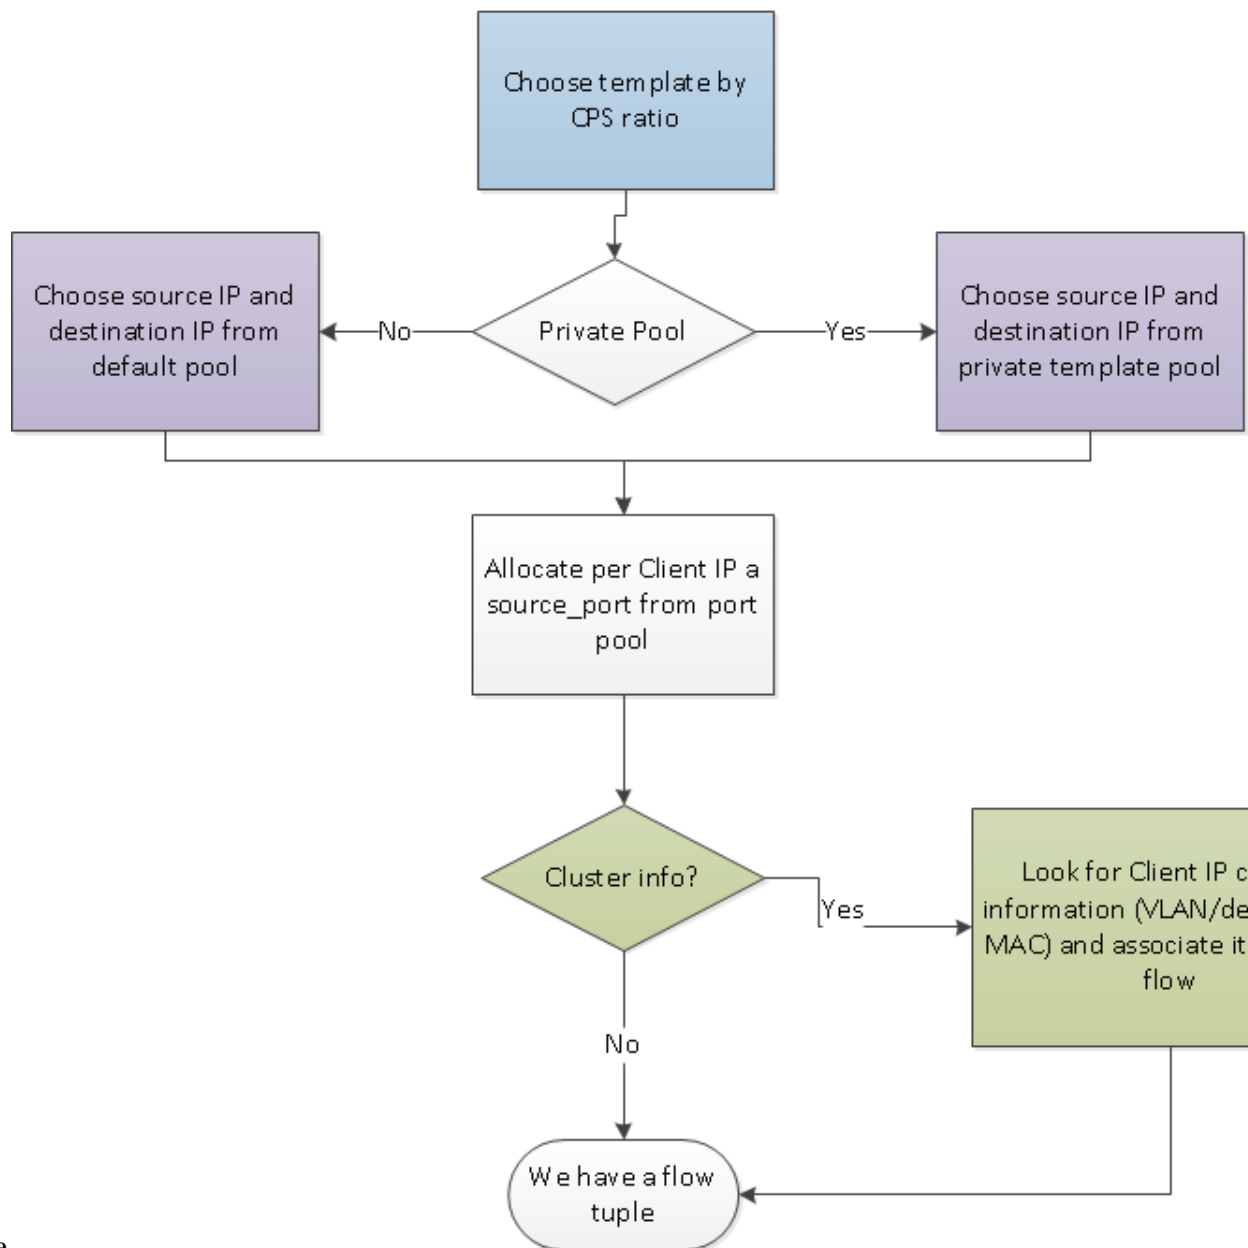

## Cluster example

### Note

Latency stream will check only 12.1.1.1/4050 path (one DUT interface) there is no way to check latency on all the ports in current version

### Note

DUT should have a static route to move packets from client to server and vice versa, as traffic is not in the same subnet of the ports

## An example of one flow generation

1. next hop resolution. TRex resolve all the next hop option e.g. 11.10.0.1/4050 11.11.0.1/4051


2. Choose template by CPS, 50% probability for each. take template #1
3. SRC\_IP=12.1.1.2, DEST\_IP=13.1.1.2
4. Allocate src\_port for 12.1.1.2 ==>src\_port=1025 for the first flow of client=12.1.1.2
5. Associate the next-hop from cluster pool. In this case 12.1.1.2 has the following information 5.1 client side : VLAN=4050 and MAC of 11.10.0.1 (Initiator) 5.2 server side : VLAN=4054 and MAC of 10.10.0.1 (Responder)

to run this using FirePower and NAT learning and checksum offload

```
[bash]>sudo ./t-rex-64 -f profile.yaml --client_cfg cluster.yaml -m 10 -d 1000 -l 1000 --l- ←
pkt-mode 2 --learn-mode 1 --checksum-offload
```

### 5.5.3 Clustering example - four ports

In this example there TRex has two dual ports. We can use traffic mask to differentiate the ip range.

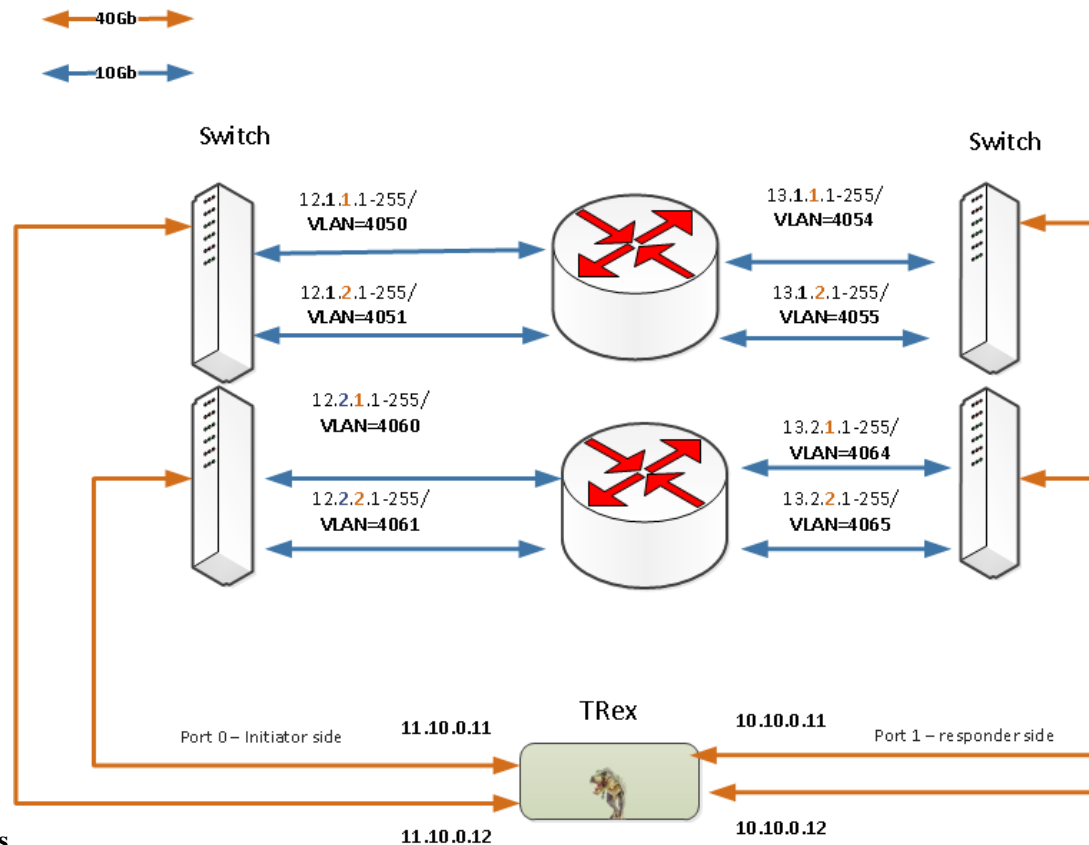

#### Cluster example with four ports

The profile file is the similar to the previous one with the difference that we need to add more mapping in the cluster file. Latency can be tested on another path in the configuration.

#### Traffic profile

```
- duration : 10.0
generator :
  distribution : "seq"
  clients_start : "12.1.1.1"
  clients_end : "12.1.1.1"
  servers_start : "13.1.1.1"
  servers_end : "13.1.1.1"
  dual_port_mask : "0.1.0.0"
  generator_clients :
```

```
- name : "c1"
  distribution : "seq"
  ip_start : "12.1.1.2"
  ip_end : "12.1.1.255"
- name : "c2"
  distribution : "seq"
  ip_start : "12.1.2.1"
  ip_end : "12.1.2.255"
generator_servers :
- name : "s1"
  distribution : "seq"
  ip_start : "13.1.1.2"
  ip_end : "13.1.1.255"
- name : "s2"
  distribution : "seq"
  ip_start : "13.1.2.1"
  ip_end : "13.1.2.255"
cap_ipg : true
cap_info :
- name: file10k.pcap
  client_pool : "c2"
  server_pool : "s2"
  cps : 1
  ipg : 20000
  rtt : 20000
  w : 1
- name: file10k.pcap
  client_pool : "c1"
  server_pool : "s1"
  cps : 1
  ipg : 20000
  rtt : 20000
  w : 1
```

- ❶ The mask is 0.1.0.0

### Cluster profile

```
lan: true

groups:

- ip_start : 12.1.1.1
  ip_end : 12.1.1.255
  initiator :
    vlan : 4050
    next_hop : 11.10.0.1
    src_ip : 11.10.0.11
  responder :
    vlan : 4054
    next_hop : 10.10.0.1
    src_ip : 10.10.0.11
  count : 1

- ip_start : 12.1.2.1
  ip_end : 12.1.2.255
  initiator :
    vlan : 4051
    next_hop : 11.10.0.2
    src_ip : 11.10.0.11
  responder :
```



```

        vlan      : 4055
        next_hop  : 10.10.0.2
        src_ip    : 10.10.0.11
count      : 1

- ip_start : 12.2.1.1      ❶
  ip_end   : 12.2.1.255
  initiator :
    vlan    : 4060
    next_hop : 11.10.0.3
    src_ip  : 11.10.0.11
  responder :
    vlan    : 4064
    next_hop : 10.10.0.3
    src_ip  : 10.10.0.11
count      : 1

- ip_start : 12.2.2.1
  ip_end   : 12.2.2.255
  initiator :
    vlan    : 4061
    next_hop : 11.10.0.4
    src_ip  : 11.10.0.11
  responder :
    vlan    : 4065
    next_hop : 10.10.0.4
    src_ip  : 10.10.0.11
count      : 1

```

- ❶ We added more clusters because more IPs will be generated (+mask)

## 5.6 NAT support

TRex can learn dynamic NAT/PAT translation. To enable this feature, use the

```
--learn-mode <mode>
```

switch at the command line. To learn the NAT translation, TRex must embed information describing which flow a packet belongs to, in the first packet of each flow. TRex can do this using one of several methods, depending on the chosen <mode>.

### Mode 1:

```
--learn-mode 1
```

**TCP flow:** Flow information is embedded in the ACK of the first TCP SYN.

**UDP flow:** Flow information is embedded in the IP identification field of the first packet in the flow.

This mode was developed for testing NAT with firewalls (which usually do not work with mode 2). In this mode, TRex also learns and compensates for TCP sequence number randomization that might be done by the DUT. TRex can learn and compensate for seq num randomization in both directions of the connection.

### Mode 2:

```
--learn-mode 2
```

Flow information is added in a special IPv4 option header (8 bytes long 0x10 id). This option header is added only to the first packet in the flow. This mode does not work with DUTs that drop packets with IP options (for example, Cisco ASA firewall).

### Mode 3:

```
--learn-mode 3
```

Similar to mode 1, but TRex does not learn the seq num randomization in the server→client direction. This mode can provide better connections-per-second performance than mode 1. But for all existing firewalls, the mode 1 cps rate is adequate.

## 5.6.1 Examples

### simple HTTP traffic

```
[bash]>sudo ./t-rex-64 -f cap2/http_simple.yaml -c 4 -l 1000 -d 100000 -m 30 --learn-mode ←
1
```

### SFR traffic without bundling/ALG support

```
[bash]>sudo ./t-rex-64 -f avl/sfr_delay_10_1g_no_bundling.yaml -c 4 -l 1000 -d 100000 -m ←
10 --learn-mode 2
```

### NAT terminal counters:

```
-Global stats enabled
Cpu Utilization : 0.6 % 33.4 Gb/core
Platform_factor : 1.0
Total-Tx       :      3.77 Gbps   NAT time out       :      917 ❶ (0 in wait for syn+ack) ❷
Total-Rx       :      3.77 Gbps   NAT aged flow id    :          0 ❸
Total-PPS      :      505.72 Kpps  Total NAT active    :      163 ❹ (12 waiting for syn) ❺
Total-CPS      :      13.43 Kcps   Total NAT opened    :     82677 ❻
```

- ❶ Number of connections for which TRex had to send the next packet in the flow, but did not learn the NAT translation yet. Should be 0. Usually, a value different than 0 is seen if the DUT drops the flow (probably because it cannot handle the number of connections).
- ❷ Number of flows for which the flow had already aged out by the time TRex received the translation info. A value other than 0 is rare. Can occur only when there is very high latency in the DUT input/output queue.
- ❸ Number of flows for which TRex sent the first packet before learning the NAT translation. The value depends on the connection per second rate and round trip time.
- ❹ Total number of translations over the lifetime of the TRex instance. May be different from the total number of flows if template is uni-directional (and consequently does not need translation).
- ❺ Out of the timed-out flows, the number that were timed out while waiting to learn the TCP seq num randomization of the server→client from the SYN+ACK packet. Seen only in --learn-mode 1.
- ❻ Out of the active NAT sessions, the number that are waiting to learn the client→server translation from the SYN packet. (Others are waiting for SYN+ACK from server.) Seen only in --learn-mode 1.

### Configuration for Cisco ASR1000 Series:

This feature was tested with the following configuration and the `sfr_delay_10_1g_no_bundling.yaml` traffic profile. The client address range is 16.0.0.1 to 16.0.0.255

```
interface TenGigabitEthernet1/0/0 ❶
 mac-address 0000.0001.0000
 mtu 4000
 ip address 11.11.11.11 255.255.255.0
 ip policy route-map p1_to_p2
 ip nat inside ❷
 load-interval 30
!

interface TenGigabitEthernet1/1/0
 mac-address 0000.0001.0000
```

```

mtu 4000
ip address 11.11.11.11 255.255.255.0
ip policy route-map p1_to_p2
ip nat outside
load-interval 30

ip nat pool my 200.0.0.0 200.0.0.255 netmask 255.255.255.0

ip nat inside source list 7 pool my overload
access-list 7 permit 16.0.0.0 0.0.0.255

ip nat inside source list 8 pool my overload
access-list 8 permit 17.0.0.0 0.0.0.255

```

- ❶ Must be connected to TRex Client port (router inside port)
- ❷ NAT inside
- ❸ NAT outside
- ❹ Pool of outside address with overload
- ❺ Match TRex YAML client range
- ❻ In case of dual port TRex

#### Limitations:

1. The IPv6-IPv6 NAT feature does not exist on routers, so this feature can work only with IPv4.
2. Does not support NAT64.
3. Bundling/plugin is not fully supported. Consequently, `sfr_delay_10.yaml` does not work. Use `sfr_delay_10_no_bundling.yaml` instead.

---

#### Note

- `--learn-verify` is a TRex debug mechanism for testing the TRex learn mechanism.
  - Need to run it when DUT is configured without NAT. It will verify that the `inside_ip==outside_ip` and `inside_port==outside_port`.
- 

## 5.7 Flow order/latency verification

In normal mode (without the feature enabled), received traffic is not checked by software. Hardware (Intel NIC) testing for dropped packets occurs at the end of the test. The only exception is the Latency/Jitter packets. This is one reason that with TRex, you **cannot** check features that terminate traffic (for example TCP Proxy).

To enable this feature, add `--rx-check <sample>` to the command line options, where `<sample>` is the sample rate. The number of flows that will be sent to the software for verification is  $(1/(\text{sample\_rate}))$ . For 40Gb/sec traffic you can use a sample rate of 1/128. Watch for Rx CPU% utilization.

---

#### Note

This feature changes the TTL of the sampled flows to 255 and expects to receive packets with TTL 254 or 255 (one routing hop). If you have more than one hop in your setup, use `--hops` to change it to a higher value. More than one hop is possible if there are number of routers between TRex client side and TRex server side.

---

This feature ensures that:

- Packets get out of DUT in order (from each flow perspective).
- There are no packet drops (no need to wait for the end of the test). Without this flag, you must wait for the end of the test in order to identify packet drops, because there is always a difference between TX and Rx, due to RTT.

### Full example

```
[bash]>sudo ./t-rex-64 -f avl/sfr_delay_10_1g.yaml -c 4 -p -l 100 -d 100000 -m 30 --rx- ↵
check 128
```

```
Cpu Utilization : 0.1 % ↵
```

```

if|   tx_ok , rx_ok , rx ,error,   average ,   max           , Jitter ,   max window
  |           ,           , check,           , latency(usec), latency (usec) , (usec) ,   ↵
                                     ❷
-----
0 |     1002,    1002,    2501,  0,        61 ,    70,    3   |  60
1 |     1002,    1002,    2012,  0,        56 ,    63,    2   |  50
2 |     1002,    1002,    2322,  0,        66 ,    74,    5   |  68
3 |     1002,    1002,    1727,  0,        58 ,    68,    2   |  52

Rx Check stats enabled ↵
↵
-----
rx check:  avg/max/jitter latency,    94 ,    744,    49   |  252  287  309 ↵
          ❹
active flows: ❺    10, fif: ❻    308, drop:    0, errors:    0   ❷
↵
-----
↵
```

- ❶ CPU% of the Rx thread. If it is too high, **increase** the sample rate.
- ❷ The latency-specific packet measurement section. See [Measuring Jittery/Latency \[jitter\\_latency\]](#) section for detailed output interpretation.
- ❸ Rx Check section. For more detailed info, press *r* during the test or at the end of the test.
- ❹ Average latency, max latency, jitter on the template flows in microseconds. This is usually **higher** than the latency check packet because the feature works more on this packet.
- ❺ Drop counters and errors counter should be zero. If not, press *r* to see the full report or view the report at the end of the test.
- ❻ fif - First in flow. Number of new flows handled by the Rx thread.
- ❼ active flows - number of active flows handled by rx thread

### Press R to Display Full Report

```
m_total_rx      : 2
m_lookup        : 2
m_found         : 1
m_fif           : 1
m_add           : 1
m_remove       : 1
```

```

m_active                               : 0
0 0 0 0 1041 0 0 0 0 0 0 0 0 min_delta : 10 usec
cnt                                     : 2
high_cnt                               : 2
max_d_time                             : 1041 usec
sliding_average                         : 1 usec
precent                                : 100.0 %
histogram
-----
h[1000] : 2
tempate_id_0 , errors:      0, jitter: 61
tempate_id_1 , errors:      0, jitter: 0
tempate_id_2 , errors:      0, jitter: 0
tempate_id_3 , errors:      0, jitter: 0
tempate_id_4 , errors:      0, jitter: 0
tempate_id_5 , errors:      0, jitter: 0
tempate_id_6 , errors:      0, jitter: 0
tempate_id_7 , errors:      0, jitter: 0
tempate_id_8 , errors:      0, jitter: 0
tempate_id_9 , errors:      0, jitter: 0
tempate_id_10 , errors:     0, jitter: 0
tempate_id_11 , errors:     0, jitter: 0
tempate_id_12 , errors:     0, jitter: 0
tempate_id_13 , errors:     0, jitter: 0
tempate_id_14 , errors:     0, jitter: 0
tempate_id_15 , errors:     0, jitter: 0
ager :
m_st_alloc                               : 1
m_st_free                                : 0
m_st_start                               : 2
m_st_stop                                : 1
m_st_handle                              : 0

```

- ❶ Errors, if any, shown here
- ❷ Low pass filter on the active average of latency events
- ❸ Error per template info

### Notes and Limitations:

- To receive the packets TRex does the following:
  - Changes the TTL to 0xff and expects 0xFF (loopback) or 0xFE (route). (Use --hop to configure this value.)
  - Adds 24 bytes of metadata as ipv4/ipv6 option header.

## Chapter 6

# Reference

### 6.1 Traffic YAML (-f argument of stateful)

#### 6.1.1 Global Traffic YAML section

```

- duration : 10.0           ❶
  generator :              ❷
    distribution : "seq"   ❸
    clients_start : "16.0.0.1"
    clients_end   : "16.0.0.255"
    servers_start : "48.0.0.1"
    servers_end   : "48.0.0.255"
    clients_per_gb : 201   ❹
    min_clients   : 101    ❺
    dual_port_mask : "1.0.0.0"
    tcp_aging     : 1      ❻
    udp_aging     : 1      ❼
  cap_ipg       : true     ❽
  cap_ipg_min   : 30       ❾
  cap_override_ipg : 200   ❿
  vlan          : { enable : 1 , vlan0 : 100 , vlan1 : 200 } ❾
  mac_override_by_ip : true ❿

```

- ❶ Test duration (seconds). Can be overridden using the `-d` option.
- ❷ See full explanation on generator section [here](#).
- ❸ `true` (default) indicates that the IPG is taken from the cap file (also taking into account `cap_ipg_min` and `cap_override_ipg` if they exist). `false` indicates that IPG is taken from per template section.
- ❹ The following two options can set the min ipg in microseconds: (if `(pkt_ipg < cap_ipg_min) { pkt_ipg = cap_override_ipg }`)
- ❺ Value to override (microseconds), as described in note above.
- ❻ Enable load balance feature. See [trex load balance section \[trex\\_load\\_bal\]](#) for info.
- ❼ Enable MAC address replacement by client IP.
- ❽ See tuple generator
- ❹ Deprecated. not used
- ❺ Deprecated. not used

- ⑥ time in sec to linger the deallocation of TCP flows (in particular return the src\_port to the pool). Good for cases when there is a very high socket utilization (>50%) and there is a need to verify that socket source port are not wrapped and reuse. Default value is zero. Better to keep it like that from performance point of view. High value could create performance penalty
- ⑦ same as #11 for UDP flows

### 6.1.2 Timer Wheel section configuration

(from v2.13) see [Timer Wheel section \[timer\\_w\]](#)

### 6.1.3 Per template section

```

- name: cap2/dns.pcap ①
  cps : 10.0          ②
  ipg : 10000         ③
  rtt : 10000         ④
  w : 1               ⑤
  server_addr : "48.0.0.7" ⑥
  one_app_server : true ⑦

```

- ① The name of the template pcap file. Can be relative path from the t-rex-64 image directory, or an absolute path. The pcap file should include only one flow. (Exception: in case of plug-ins).
- ② Connection per second. This is the value that will be used if specifying -m 1 from command line (giving -m x will multiply this
- ③ If the global section of the YAML file includes `cap_ipg : false`, this line sets the inter-packet gap in microseconds.
- ④ Should be set to the same value as ipg (microseconds).
- ⑤ Default value: w=1. This indicates to the IP generator how to generate the flows. If w=2, two flows from the same template will be generated in a burst (more for HTTP that has burst of flows).
- ⑥ If `one_app_server` is set to true, then all templates will use the same server.
- ⑦ If the same server address is required, set this value to true.

## 6.2 Platform YAML (--cfg argument)

The configuration file, in YAML format, configures TRex behavior, including:

- IP address or MAC address for each port (source and destination).
- Masked interfaces, to ensure that TRex does not try to use the management ports as traffic ports.
- Changing the zmq/telnet TCP port.

You specify which config file to use by adding `--cfg <file name>` to the command line arguments.

If no `--cfg` given, the default `/etc/trex_cfg.yaml` is used.

Configuration file examples can be found in the `$TREX_ROOT/scripts/cfg` folder.

## 6.2.1 Basic Configuration

```

- port_limit      : 2      #mandatory ❶
  version        : 2      #mandatory ❷
  interfaces     : ["03:00.0", "03:00.1"] #mandatory ❸
  #enable_zmq_pub : true #optional ❹
  #zmq_pub_port  : 4500 #optional ❺
  #zmq_rpc_port  : 4501 #optional ❻
  #prefix        : setup1 #optional ❼
  #limit_memory  : 1024 #optional ❽
  c              : 4 #optional ❾
  port_bandwidth_gb : 10 #optional ❿
  port_info      : # set eh mac addr mandatory
    - default_gw : 1.1.1.1 # port 0 ❾
      dest_mac   : '00:00:00:01:00:00' # Either default_gw or dest_mac is mandatory ←
        ❿
      src_mac    : '00:00:00:02:00:00' # optional ❿
      ip         : 2.2.2.2 # optional ❿
      vlan      : 15 # optional ❿
    - dest_mac   : '00:00:00:03:00:00' # port 1
      src_mac    : '00:00:00:04:00:00'
    - dest_mac   : '00:00:00:05:00:00' # port 2
      src_mac    : '00:00:00:06:00:00'
    - dest_mac   : [0x0,0x0,0x0,0x7,0x0,0x01] # port 3 ❿
      src_mac    : [0x0,0x0,0x0,0x8,0x0,0x02] # ❿

```

- ❶ Number of ports. Should be equal to the number of interfaces listed in 3. - mandatory
- ❷ Must be set to 2. - mandatory
- ❸ List of interfaces to use. Run `sudo ./dpdk_setup_ports.py --show` to see the list you can choose from. - mandatory. there are cases that one PCI can have more than one port (MLX4 driver for example), for this you can use the format `dd:dd.d/d` for example `03:00.0/1`, it means the second port of this device. The order of the list is important the first will be the virtual port 0.
- ❹ Enable the ZMQ publisher for stats data, default is true.
- ❺ ZMQ port number. Default value is good. If running two TRex instances on the same machine, each should be given distinct number. Otherwise, can remove this line.
- ❻ If running two TRex instances on the same machine, each should be given distinct name. Otherwise, can remove this line. ( Passed to DPDK as `--file-prefix` arg)
- ❼ Limit the amount of packet memory used. (Passed to dpdk as `-m` arg)
- ❽ Number of threads (cores) TRex will use per interface pair ( Can be overridden by `-c` command line option )
- ❿ The bandwidth of each interface in Gbs. In this example we have 10Gbs interfaces. For VM, put 1. Used to tune the amount of memory allocated by TRex.
- ❾, ❿ TRex need to know the destination MAC address to use on each port. You can specify this in one of two ways:  
Specify `dest_mac` directly.  
Specify `default_gw` (since version 2.10). In this case (only if no `dest_mac` given), TRex will issue ARP request to this IP, and will use the result as dest MAC. If no `dest_mac` given, and no ARP response received, TRex will exit.
- ❿ Source MAC to use when sending packets from this interface. If not given (since version 2.10), MAC address of the port will be used.
- ❿ If given (since version 2.10), TRex will issue gratuitous ARP for the ip + src MAC pair on appropriate port. In stateful mode, gratuitous ARP for each ip will be sent every 120 seconds (Can be changed using `--arp-refresh-period` argument).
- ❿ If given (since version 2.18), all traffic on the port will be sent with this VLAN tag.



- 16, 17 Old MAC address format. New format is supported since version v2.09.
- 6 Stateless ZMQ RPC port number. Default value is good. If running two TRex instances on the same machine, each should be given distinct number. Otherwise, can remove this line.

---

#### Note

If you use version earlier than 2.10, or choose to omit the "ip" and have mac based configuration, be aware that TRex will not send any gratuitous ARP and will not answer ARP requests. In this case, you must configure static ARP entries pointing to TRex port on your DUT. For an example config, you can look [here \[trex\\_config\]](#).

---

To find out which interfaces (NIC ports) can be used, perform the following:

```
[bash]>>sudo ./dpdk_setup_ports.py --show

Network devices using DPDK-compatible driver
=====

Network devices using kernel driver
=====
0000:02:00.0 '82545EM Gigabit Ethernet Controller' if=eth2 drv=e1000 unused=igb_uio * ↔
  Active* #1
0000:03:00.0 '82599ES 10-Gigabit SFI/SFP+ Network Connection' drv= unused=ixgb #2
0000:03:00.1 '82599ES 10-Gigabit SFI/SFP+ Network Connection' drv= unused=ixgb
0000:13:00.0 '82599ES 10-Gigabit SFI/SFP+ Network Connection' drv= unused=ixgb
0000:13:00.1 '82599ES 10-Gigabit SFI/SFP+ Network Connection' drv= unused=ixgb

Other network devices
=====
<none>
```

- 1 We see that 02:00.0 is active (our management port).
- 2 All other NIC ports (03:00.0, 03:00.1, 13:00.0, 13:00.1) can be used.

minimum configuration file is:

```
<none>
- port_limit      : 4
  version        : 2
  interfaces     : ["03:00.0", "03:00.1", "13:00.1", "13:00.0"]
```

## 6.2.2 Memory section configuration

The memory section is optional. It is used when there is a need to tune the amount of memory used by TRex packet manager. Default values (from the TRex source code), are usually good for most users. Unless you have some unusual needs, you can eliminate this section.

```
- port_limit      : 2
  version        : 2
  interfaces     : ["03:00.0", "03:00.1"]
  memory        :
    mbuf_64      : 16380
    mbuf_128     : 8190
    mbuf_256     : 8190
    mbuf_512     : 8190
    mbuf_1024    : 8190
    mbuf_2048    : 4096
```

```

traffic_mbuf_64      : 16380      ③
traffic_mbuf_128    : 8190
traffic_mbuf_256    : 8190
traffic_mbuf_512    : 8190
traffic_mbuf_1024   : 8190
traffic_mbuf_2048   : 4096
dp_flows            : 1048576     ④
global_flows        : 10240      ⑤

```

- ① Memory section header
- ② Numbers of memory buffers allocated for packets in transit, per port pair. Numbers are specified per packet size.
- ③ Numbers of memory buffers allocated for holding the part of the packet which is remained unchanged per template. You should increase numbers here, only if you have very large amount of templates.
- ④ Number of TRex flow objects allocated (To get best performance they are allocated upfront, and not dynamically). If you expect more concurrent flows than the default (1048576), enlarge this.
- ⑤ Number objects TRex allocates for holding NAT “in transit” connections. In stateful mode, TRex learn NAT translation by looking at the address changes done by the DUT to the first packet of each flow. So, these are the number of flows for which TRex sent the first flow packet, but did not learn the translation yet. Again, default here (10240) should be good. Increase only if you use NAT and see issues.

### 6.2.3 Platform section configuration

The platform section is optional. It is used to tune the performance and allocate the cores to the right NUMA a configuration file now has the following struct to support multi instance

```


- version      : 2
  interfaces    : ["03:00.0", "03:00.1"]
  port_limit    : 2
  ....
  platform :
    master_thread_id : 0      ①
    latency_thread_id : 5     ②
    dual_if :
      - socket : 0           ⑤
        threads : [1,2,3,4]  ⑥

```

- ① Platform section header.
- ② Hardware thread\_id for control thread.
- ③ Hardware thread\_id for RX thread.
- ④ “dual\_if” section defines info for interface pairs (according to the order in “interfaces” list). each section, starting with “-socket” defines info for different interface pair.
- ⑤ The NUMA node from which memory will be allocated for use by the interface pair.
- ⑥ Hardware threads to be used for sending packets for the interface pair. Threads are pinned to cores, so specifying threads actually determines the hardware cores.


#### Real example:

We connected 2 Intel XL710 NICs close to each other on the motherboard. They shared the same NUMA:

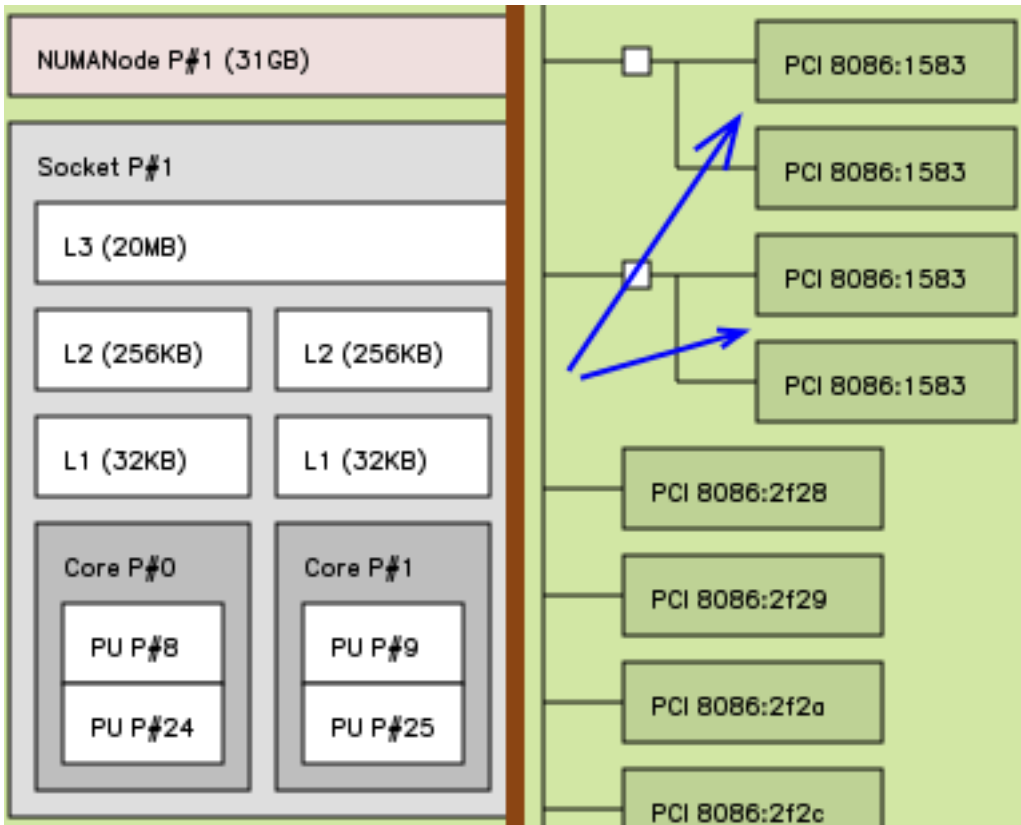

CPU utilization was very high ~100%, with c=2 and c=4 the results were same.

Then, we moved the cards to different NUMAs:

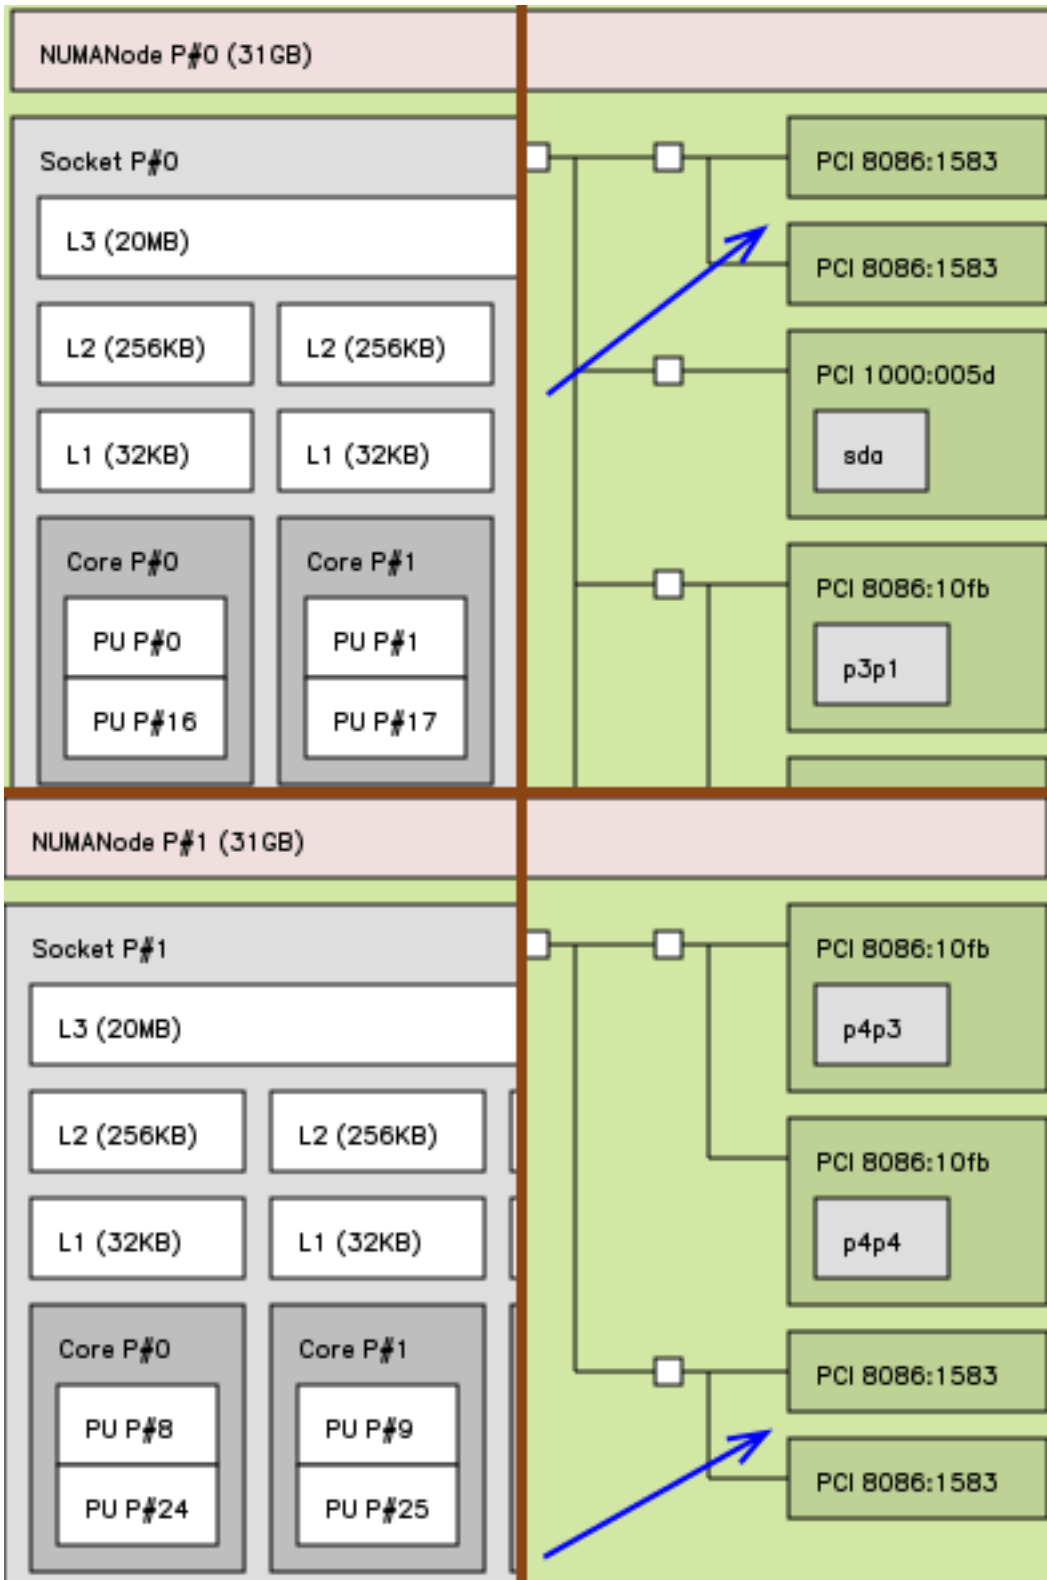

+ We added configuration to the /etc/trex\_cfg.yaml:

```
platform :
  master_thread_id : 0
  latency_thread_id : 8
  dual_if :
    - socket : 0
      threads : [1, 2, 3, 4, 5, 6, 7]
```

```
- socket : 1
  threads : [9, 10, 11, 12, 13, 14, 15]
```

This gave best results: with **~98 Gb/s TX BW** and  $c=7$ , CPU utilization became **~21%**! (40% with  $c=4$ )

## 6.2.4 Timer Wheel section configuration

The memory section is optional. It is used when there is a need to tune the amount of memory used by TRex packet manager. Default values (from the TRex source code), are usually good for most users. Unless you have some unusual needs, you can eliminate this section.

## 6.2.5 Timer Wheel section configuration

The flow scheduler uses timer wheel to schedule flows. To tune it for a large number of flows it is possible to change the default values. This is an advance configuration, don't use it if you don't know what you are doing. it can be configure in `trex_cfg` file and `trex` traffic profile.

```
tw :
  buckets : 1024           ❶
  levels : 3               ❷
  bucket_time_usec : 20.0  ❸
```

- ❶ the number of buckets in each level, higher number will improve performance, but will reduce the maximum levels.
- ❷ how many levels.
- ❸ bucket time in usec. higher number will create more bursts

## 6.3 Command line options

### --active-flows

An experimental switch to scale up or down the number of active flows. It is not accurate due to the quantization of flow scheduler and in some cases does not work. Example: `--active-flows 500000` wil set the ballpark of the active flows to be ~0.5M.

### --allow-coredump

Allow creation of core dump.

### --arp-refresh-period <num>

Period in seconds between sending of gratuitous ARP for our addresses. Value of 0 means ``never send``.

### --astf

Since version 2.29.

Flag that specifies advanced stateful mode. In this case, `-f` argument should be Python ASTF profile. Currently works as batch, WIP on adding interactive support.

### -c <num>

Number of hardware threads to use per interface pair. Use at least 4 for TRex 40Gbs.

TRex uses 2 threads for inner needs. Rest of the threads can be used. Maximum number here, can be number of free threads divided by number of interface pairs.

For virtual NICs on VM, we always use one thread per interface pair.

### --cfg <file name>

TRex configuration file to use. See relevant manual section for all config file options.

**--checksum-offload-disable**

Enable IP, TCP and UDP tx checksum offloading, using DPDK. This requires all used interfaces to support this.

**--client\_cfg <file>**

YAML file describing clients configuration. Look [here](#) for details.

**-d <num>**

Duration of the test in seconds.

**-e**

Same as `-p`, but change the src/dst IP according to the port. Using this, you will get all the packets of the same flow from the same port, and with the same src/dst IP.

It will not work good with NBAR as it expects all clients ip to be sent from same direction.

**-f <yaml file>**

Specify traffic YAML configuration file to use. Mandatory option for stateful mode.

**--hops <num>**

Provide number of hops in the setup (default is one hop). Relevant only if the Rx check is enabled. Look [here](#) for details.

**-i**

Flag that specifies interactive mode. Currently used for stateless (WIP adding advanced stateful to it)

**--iom <mode>**

I/O mode. Possible values: 0 (silent), 1 (normal), 2 (short).

**--ipv6**

Convert templates to IPv6 mode.

**-k <num>**

Run “warm up” traffic for num seconds before starting the test. This is needed if TRex is connected to switch running spanning tree. You want the switch to see traffic from all relevant source MAC addresses before starting to send real data. Traffic sent is the same used for the latency test (`-l` option)

Current limitation (holds for TRex version 1.82): does not work properly on VM.

**-l <rate>**

In parallel to the test, run latency check, sending packets at rate/sec from each interface.

**--learn-mode <mode>**

Learn the dynamic NAT translation. Look [here](#) for details.

**--learn-verify**

Used for testing the NAT learning mechanism. Do the learning as if DUT is doing NAT, but verify that packets are not actually changed.

**--limit-ports <port num>**

Limit the number of ports used. Overrides the “port\_limit” from config file.

**--lm <hex bit mask>**

Mask specifying which ports will send traffic. For example, 0x1 - Only port 0 will send. 0x4 - only port 2 will send. This can be used to verify port connectivity. You can send packets from one port, and look at counters on the DUT.

**--lo**

Latency only - Send only latency packets. Do not send packets from the templates/pcap files.

**-m <num>**

Rate multiplier. TRex will multiply the CPS rate of each template by num.

**--nc**

If set, will terminate exactly at the end of the specified duration. This provides faster, more accurate TRex termination. By default (without this option), TRex waits for all flows to terminate gracefully. In case of a very long flow, termination might prolong.

**--no-flow-control-change**

Since version 2.21.

Prevents TRex from changing flow control. By default (without this option), TRex disables flow control at startup for all cards, except for the Intel XL710 40G card.

**--no-hw-flow-stat**

Relevant only for Intel x710 stateless mode. Do not use HW counters for flow stats.

Enabling this will support lower traffic rate, but will also report RX byte count statistics.

**--no-key**

Daemon mode, don't get input from keyboard.

**--no-watchdog**

Disable watchdog.

**-p**

Send all packets of the same flow from the same direction. For each flow, TRex will randomly choose between client port and server port, and send all the packets from this port. src/dst IPs keep their values as if packets are sent from two ports. Meaning, we get on the same port packets from client to server, and from server to client.

If you are using this with a router, you can not rely on routing rules to pass traffic to TRex, you must configure policy based routes to pass all traffic from one DUT port to the other.

**-pm <num>**

Platform factor. If the setup includes splitter, you can multiply all statistic number displayed by TRex by this factor, so that they will match the DUT counters.

**-pubd**

Disable ZMQ monitor's publishers.

**--queue-drop**

Since version 2.37.

Do not retry to send packets on failure (queue full etc.).

**--rx-check <sample rate>**

Enable Rx check module. Using this, each thread randomly samples 1/sample\_rate of the flows and checks packet order, latency, and additional statistics for the sampled flows. Note: This feature works on the RX thread.

**--sleeps**

Since version 2.37.

Use sleeps instead of busy wait in scheduler (less accurate, more power saving)

**--software**

Since version 2.21.

Do not configure any hardware rules. In this mode, all RX packets will be processed by software. No HW assist for dropping (while counting) packets will be used. This mode is good for enabling features like **per stream statistics**, and **latency**, support packet types, not supported by HW flow director rules (For example QinQ).

You can also use this mode for running TRex on interfaces which manifest themselves as ones supported by TRex, but in reality support less hardware capabilities. For example, NICs supported by DPDK e1000\_igb driver, but with different HW capabilities than i350.

Drawback of this is that because software has to handle all received packets, total rate of RX streams is significantly lower. Currently, this mode is also limited to using only one TX core (and one RX core as usual).

**-v <verbosity level>**

Show debug info. Value of 1 shows debug info on startup. Value of 3, shows debug info during run at some cases. Might slow down operation.

**--vlan**

Relevant only for stateless mode with Intel 82599 10G NIC. When configuring flow stat and latency per stream rules, assume all streams uses VLAN.

**-w <num seconds>**

Wait additional time between NICs initialization and sending traffic. Can be useful if DUT needs extra setup time. Default is 1 second.

---



## Chapter 7

# Appendix

[Simulator](#)

[Firmware update to XL710/X710](#)

[TRex with ASA 5585](#)

[Fedora 21 Server installation](#)

[Configure Linux host as network emulator](#)

[Configure Linux to use VF](#)

[Napatech support](#)

[Mellanox ConnectX-4/5 support](#)

[Cisco VIC support](#)

[More active flows](#)

---